

# TABLE OF CONTENTS

## SPORTSTER MODELS

---

### 1.1 MAINTENANCE SCHEDULE

Sportster Models.....	1-1
Regular Service Intervals.....	1-1
Maintenance Records.....	1-2

## TOURING MODELS

---

### 2.1 MAINTENANCE SCHEDULE

Touring Models.....	2-1
Regular Service Intervals.....	2-1
Maintenance Records.....	2-2
Police Models.....	2-2
Regular Service Intervals.....	2-2
Maintenance Records.....	2-4
CVO Ultra Models.....	2-4
Regular Service Intervals.....	2-4
Maintenance Records.....	2-5
CVO Street Glide Models.....	2-5
Regular Service Intervals.....	2-5
Maintenance Records.....	2-7
CVO Road Glide Models.....	2-7

Regular Service Intervals.....	2-7
Maintenance Records.....	2-8

## SOFTAIL MODELS

---

### 3.1 MAINTENANCE SCHEDULE

Softail Models.....	3-1
Regular Service Intervals.....	3-1
Maintenance Records.....	3-2

## TRIKE MODELS

---

### 4.1 MAINTENANCE SCHEDULE

Trike Models.....	4-1
Regular Service Intervals.....	4-1
Maintenance Records.....	4-2

## STREET MODELS

---

### 5.1 MAINTENANCE SCHEDULE

Street Models.....	5-1
Regular Service Intervals.....	5-1
Maintenance Records.....	5-2

## NOTES

---

**SUBJECT**

1.1 MAINTENANCE SCHEDULE.....

**PAGE NO.**

1-1

## NOTES

---

## SPORTSTER MODELS

### Regular Service Intervals

Service must be performed at specified intervals to keep your Harley-Davidson motorcycle operating at peak performance. Refer to Table 1-1.

**NOTE**

- The use of parts and service procedures other than Harley-Davidson approved parts and service procedures may void the limited warranty. Any alterations to the emission system components, such as the intake and exhaust system, may be in violation of motor vehicle laws.

- Some countries, such as Brazil, may require all regular maintenance to be performed by an authorized Harley-Davidson dealer for your limited warranty to remain in effect. Check with your authorized Harley-Davidson dealer.
- Some countries, such as Brazil, may require additional annual (or semi-annual) regular maintenance steps to be performed to keep your limited warranty in effect and/or comply with vehicle regulations. Check with your authorized Harley-Davidson dealer as well as the motorcycle regulations in your country.
- After completing the final service interval, repeat the service schedule starting at the 8000 km (5000 mi) interval.
- Whenever a vehicle is in for maintenance, always check for and complete recalls and open product programs.
- Whenever a vehicle is in for maintenance, always verify that the latest calibration is installed.

**Table 1-1. Regular Service Intervals: Harley-Davidson Sportster Models**

ITEM SERVICED	1000 mi 1600 km	5000 mi 8000 km	10000 mi 16000 km	15000 mi 24000 km	20000 mi 32000 km	25000 mi 40000 km	30000 mi 48000 km	35000 mi 56000 km	40000 mi 64000 km	45000 mi 72000 km	50000 mi 80000 km	NOTES
Check operation of electrical equipment and switches	X	X	X	X	X	X	X	X	X	X	X	
Check front tire pressure, inspect tread	X	X	X	X	X	X	X	X	X	X	X	1
Check front wheel spoke torque (if equipped)	X	X			X			X			X	2, 3, 4
Inspect front brake fluid level	X	X	X	X	X	X	X	X	X	X	X	
Check DOT4 front brake fluid for moisture	X	X	X	X	X	X	X	X	X	X	X	1, 2
Adjust steering head bearings	X		X		X		X		X		X	2
Lubricate steering head bearings							X					2, 6
Check, adjust and lubricate throttle controls	X	X	X	X	X	X	X	X	X	X	X	2
Check upper and lower switch housing screw torque	X		X		X		X		X		X	1, 2, 5
Inspect air cleaner, service as required		X	X	X	X	X	X	X	X	X	X	4
Replace engine oil and filter	X	X	X	X	X	X	X	X	X	X	X	1, 4
Check primary chain adjustment	X	X	X	X	X	X	X	X	X	X	X	
Replace transmission lubricant	X		X		X		X		X		X	4
Inspect oil lines and brake system for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	1, 2
Inspect fuel lines and fittings for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	1, 2
Check upper front stabilizer link to engine bracket mounting screw torque	X		X		X		X		X		X	1, 2, 5
Check front isolator mounting bolt and nut torque	X		X		X		X		X		X	1, 2, 5
Inspect rear brake fluid level	X	X	X	X	X	X	X	X	X	X	X	
Check DOT 4 rear brake fluid for moisture	X	X	X	X	X	X	X	X	X	X	X	1, 2
Brake system	Flush brake system and replace DOT 4 hydraulic brake fluid every two years or sooner if moisture content is 3% or greater											2
Inspect brake pads and discs for wear	X	X	X	X	X	X	X	X	X	X	X	
Check front axle nut torque	X		X		X		X		X		X	1, 2, 5
Check brake banjo bolt torque	X		X		X		X		X		X	1, 2, 5
Inspect and lubricate jiffy stand	X	X	X	X	X	X	X	X	X	X	X	2, 4
Check clutch adjustment	X	X	X	X	X	X	X	X	X	X	X	2, 4
Check, adjust and lubricate brake and clutch controls	X	X	X	X	X	X	X	X	X	X	X	
Check rear wheel spoke torque (if equipped)	X	X			X			X			X	2, 3, 4

**Table 1-1. Regular Service Intervals: Harley-Davidson Sportster Models**

ITEM SERVICED	1000 mi 1600 km	5000 mi 8000 km	10000 mi 16000 km	15000 mi 24000 km	20000 mi 32000 km	25000 mi 40000 km	30000 mi 48000 km	35000 mi 56000 km	40000 mi 64000 km	45000 mi 72000 km	50000 mi 80000 km	NOTES
Check rear tire pressure, inspect tread	X	X	X	X	X	X	X	X	X	X	X	1
Inspect drive belt and sprockets, adjust belt	X	X	X	X	X	X	X	X	X	X	X	2
Check rear axle nut torque	X		X		X		X		X		X	1, 2, 5
Inspect exhaust system for leaks, cracks and loose or missing fasteners or exhaust shields	X	X	X	X	X	X	X	X	X	X	X	1, 4
Battery	Check battery, terminal torque and clean connections annually.											1
Spark plugs	Replace spark plugs every two years or every 30,000 mi (48,000 km), whichever comes first.											
Rebuild front forks											X	2, 7
Fuel filter	Replace fuel filter element every 100000 mi (161,000 km).											2, 4
Road test to verify component and system functions	X	X	X	X	X	X	X	X	X	X	X	
<b>NOTES:</b>	1. Perform annually or at specified intervals, whichever comes first. 2. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 3. Perform spoke tension check at 1000 mi (2,000 km), 5000 mi (8,000 km), 20000 mi (32,000 km) services and every 15000 mi (24,000 km) interval thereafter. Not all vehicles have spoked wheels. Consult appropriate topic in service manual. 4. Perform maintenance more frequently in severe riding conditions (such as extreme temperatures, dusty environments, mountainous or rough roads, long storage conditions, short runs, heavy stop/go traffic or poor fuel quality). 5. For torque instructions, see Shop Practices in the service manual. 6. Disassemble, lubricate and inspect every 30000 mi (48,000 km). 7. Disassemble, inspect, rebuild forks and replace fork oil every 50000 mi (80,000 km).											

**Maintenance Records**

Maintain a record of this service to keep your new motorcycle limited warranty in force. Refer to Table 1-2.

**Table 1-2. Owner's Maintenance Records**

SERVICE MILE INTERVAL	DATE	DEALER NUMBER	TECHNICIAN NAME	TECHNICIAN SIGNATURE
1,000 mi (1,600 km)				
5,000 mi (8,000 km)				
10,000 mi (16,000 km)				
15,000 mi (24,000 km)				
20,000 mi (32,000 km)				
25,000 mi (40,000 km)				
30,000 mi (48,000 km)				
35,000 mi (56,000 km)				
40,000 mi (64,000 km)				
45,000 mi (72,000 km)				
50,000 mi (80,000 km)				

**SUBJECT**

2.1 MAINTENANCE SCHEDULE.....

**PAGE NO.**

2-1

## NOTES

---

## TOURING MODELS

### Regular Service Intervals

Service must be performed at specified intervals to keep your Harley-Davidson motorcycle operating at peak performance. Refer to Table 2-1.

**NOTE**

- The use of parts and service procedures other than Harley-Davidson approved parts and service procedures may void the limited warranty. Any alterations to the emission system components, such as the intake and exhaust system, may be in violation of motor vehicle laws.

- Some countries, such as Brazil, may require all regular maintenance to be performed by an authorized Harley-Davidson dealer for your limited warranty to remain in effect. Check with your authorized Harley-Davidson dealer.
- Some countries, such as Brazil, may require additional annual (or semi-annual) regular maintenance steps to be performed to keep your limited warranty in effect and/or comply with vehicle regulations. Check with your authorized Harley-Davidson dealer as well as the motorcycle regulations in your country.
- After completing the final service interval, repeat the service schedule starting at the 8000 km (5000 mi) interval.
- Whenever a vehicle is in for maintenance, always check for and complete recalls and open product programs.
- Whenever a vehicle is in for maintenance, always verify that the latest calibration is installed.

**Table 2-1. Regular Service Intervals: Harley-Davidson Touring Models**

ITEM SERVICED	1000 mi 1600 km	5000 mi 8000 km	10000 mi 16000 km	15000 mi 24000 km	20000 mi 32000 km	25000 mi 40000 km	30000 mi 48000 km	35000 mi 56000 km	40000 mi 64000 km	45000 mi 72000 km	50000 mi 80000 km	NOTES
Check operation of electrical equipment and switches	X	X	X	X	X	X	X	X	X	X	X	
Check front tire pressure, inspect tread	X	X	X	X	X	X	X	X	X	X	X	1
Check front wheel spoke tightness (if equipped)	X	X			X			X			X	2, 3, 9
Inspect front brake fluid level	X	X	X	X	X	X	X	X	X	X	X	4
Inspect clutch fluid system for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	5
Check DOT4 clutch fluid and front brake fluid for moisture	X	X	X	X	X	X	X	X	X	X	X	1, 2
Check hand control fastener switch housing screw torque	X		X		X		X		X		X	1, 2, 6
Check clutch lever handlebar clamp screw torque	X		X		X		X		X		X	1, 2, 6
Check master cylinder handlebar clamp screw torque	X		X		X		X		X		X	1, 2, 6
Inspect, lubricate and adjust steering head bearings						X					X	2, 7
Inspect windshield bushings (if equipped)			X		X		X		X		X	2
Inspect air cleaner, service as required		X	X	X	X	X	X	X	X	X	X	3
Replace engine oil and filter	X	X	X	X	X	X	X	X	X	X	X	1, 3
Check engine coolant freeze point, inspect for leaks	X	X	X	X	X	X	X	X	X	X	X	
Coolant	Replace coolant every 30000 mi (48,000 km)											2
Clean radiators or oil cooler	X	X	X	X	X	X	X	X	X	X	X	
Replace primary chaincase lubricant	X		X		X		X		X		X	3
Replace transmission lubricant	X				X				X			3
Inspect oil lines and brake system for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	1, 2
Inspect fuel lines and fittings for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	1, 2
Inspect rear brake fluid level	X	X	X	X	X	X	X	X	X	X	X	4
Check DOT 4 rear brake fluid for moisture	X	X	X	X	X	X	X	X	X	X	X	1, 2
Brake and clutch systems	Flush brake and clutch systems and replace DOT 4 hydraulic brake and clutch fluids every two years or sooner if moisture content is 3% or greater											2
Inspect brake pads and discs for wear	X	X	X	X	X	X	X	X	X	X	X	
Check front axle nut torque	X		X		X		X		X		X	1, 2, 6
Inspect and lubricate jiffy stand	X	X	X	X	X	X	X	X	X	X	X	2, 3
Check, adjust and lubricate (with HARLEY LUBE) brake and clutch controls	X	X	X	X	X	X	X	X	X	X	X	

**Table 2-1. Regular Service Intervals: Harley-Davidson Touring Models**

ITEM SERVICED	1000 mi 1600 km	5000 mi 8000 km	10000 mi 16000 km	15000 mi 24000 km	20000 mi 32000 km	25000 mi 40000 km	30000 mi 48000 km	35000 mi 56000 km	40000 mi 64000 km	45000 mi 72000 km	50000 mi 80000 km	NOTES
Check tightness of rear wheel spokes (if equipped)	X	X			X			X			X	2, 3, 9
Check rear tire pressure, inspect tread	X	X	X	X	X	X	X	X	X	X	X	1
Inspect and adjust drive belt and sprockets	X	X	X	X	X	X	X	X	X	X	X	2
Check rear axle nut torque	X		X		X		X		X		X	1, 2, 6
Inspect exhaust system for leaks, cracks and loose, or missing fasteners or exhaust shields	X	X	X	X	X	X	X	X	X	X	X	3
Battery	Check battery, terminal torque and clean connections annually. Lubricate terminals with ELECTRICAL CONTACT LUBRICANT.											1
Spark plugs	Replace spark plugs every two years or every 30000 mi (48,000 km), whichever comes first.											
Lubricate fuel door hinge and latch with HARLEY LUBE	X	X	X	X	X	X	X	X	X	X	X	
Rebuild front forks											X	2, 8
Fuel filter	Replace fuel filter every 100000 mi (161,000 km).											2, 3
Rear sprocket isolators	Inspect rear sprocket isolators for wear at each rear tire change.											
Road test to verify component and system functions	X	X	X	X	X	X	X	X	X	X	X	
<b>NOTES:</b>	1. Perform annually or at specified intervals, whichever comes first. 2. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 3. Perform maintenance more frequently in severe riding conditions such as extreme temperatures, dusty environments, mountainous or rough roads, long storage conditions, short runs, heavy stop/go traffic or poor fuel quality. 4. Brake fluid level will drop as brake pads wear. 5. Clutch fluid level will rise as clutch wears. 6. For torque instructions, see Shop Practices in the service manual. 7. Disassemble, lubricate, inspect and adjust every 25000 mi (40,000 km). 8. Disassemble, inspect, rebuild forks and replace fork oil every 50000 mi (80,000 km). 9. Perform spoke tension check at 1000 mi (2,000 km), 5000 mi (8,000 km), 20000 mi (32,000 km) services and every 15000 mi (24,000 km) interval thereafter. Not all vehicles are equipped with spoke wheels. Consult appropriate topic in service manual.											

## Maintenance Records

Maintain a record of this service to keep your new motorcycle limited warranty in force. Refer to Table 2-2.

**Table 2-2. Owner's Maintenance Records**

SERVICE MILE INTERVAL	DATE	DEALER NUMBER	TECHNICIAN NAME	TECHNICIAN SIGNATURE
1,000 mi (1,600 km)				
5,000 mi (8,000 km)				
10,000 mi (16,000 km)				
15,000 mi (24,000 km)				
20,000 mi (32,000 km)				
25,000 mi (40,000 km)				
30,000 mi (48,000 km)				
35,000 mi (56,000 km)				
40,000 mi (64,000 km)				
45,000 mi (72,000 km)				
50,000 mi (80,000 km)				

## POLICE MODELS

### Regular Service Intervals

Service must be performed at specified intervals to keep your Harley-Davidson motorcycle operating at peak performance. Refer to Table 2-3.

**NOTE**

- The use of parts and service procedures other than Harley-Davidson approved parts and service procedures may void the limited warranty. Any alterations to the emission system components, such as the intake and exhaust system, may be in violation of motor vehicle laws.

- Some countries, such as Brazil, may require all regular maintenance to be performed by an authorized Harley-Davidson dealer for your limited warranty to remain in effect. Check with your authorized Harley-Davidson dealer.
- Some countries, such as Brazil, may require additional annual (or semi-annual) regular maintenance steps to be performed to keep your limited warranty in effect and/or comply with vehicle regulations. Check with your authorized Harley-Davidson dealer as well as the motorcycle regulations in your country.
- After completing the final service interval, repeat the service schedule starting at the 8000 km (5000 mi) interval.
- Whenever a vehicle is in for maintenance, always check for and complete recalls and open product programs.

- Whenever a vehicle is in for maintenance, always verify that the latest calibration is installed.

**Table 2-3. Regular Service Intervals: Harley-Davidson Police Models**

ITEM SERVICED	1000 MI 1600 KM	5000 MI 8000 KM	10000 MI 16000 KM	15000 MI 24000 KM	20000 MI 32000 KM	25000 MI 40000 KM	30000 MI 48000 KM	35000 MI 56000 KM	40000 MI 64000 KM	45000 MI 72000 KM	50000 MI 80000 KM	NOTES
Check operation of electrical equipment and switches	X	X	X	X	X	X	X	X	X	X	X	
Check front tire pressure, inspect tread	X	X	X	X	X	X	X	X	X	X	X	1
Inspect front brake fluid level	X	X	X	X	X	X	X	X	X	X	X	5
Check DOT 4 front brake fluid for moisture	X	X	X	X	X	X	X	X	X	X	X	1, 2
Inspect clutch fluid system for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	4, 5
Check hand control fastener switch housing screw torque	X		X		X		X		X		X	1, 2, 6
Check clutch lever handlebar clamp screw torque	X		X		X		X		X		X	1, 2, 6
Check master cylinder handlebar clamp screw torque	X		X		X		X		X		X	1, 2, 6
Inspect, lubricate and adjust steering head bearings						X					X	2, 7
Inspect windshield bushings (if equipped)			X		X		X		X		X	2
Inspect air cleaner, service as required		X	X	X	X	X	X	X	X	X	X	3
Replace engine oil and filter	X	X	X	X	X	X	X	X	X	X	X	1, 3
Clean oil cooler	X	X	X	X	X	X	X	X	X	X	X	
Replace primary chaincase lubricant	X		X		X		X		X		X	3
Replace transmission lubricant	X				X				X			3
Inspect oil lines and brake system for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	1, 2
Inspect fuel lines and fittings for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	1, 2
Inspect rear brake fluid level	X	X	X	X	X	X	X	X	X	X	X	5
Check DOT 4 rear brake fluid for moisture	X	X	X	X	X	X	X	X	X	X	X	1, 2
Brake and clutch systems	Flush brake and clutch systems and replace DOT 4 hydraulic brake and clutch fluids every two years or sooner if moisture content is 3% or greater											2
Inspect brake pads and discs for wear	X	X	X	X	X	X	X	X	X	X	X	
Check front axle nut torque	X		X		X		X		X		X	1, 2, 6
Inspect and lubricate jiffy stand	X	X	X	X	X	X	X	X	X	X	X	2, 3
Check and lubricate (with HARLEY LUBE) brake and clutch controls	X	X	X	X	X	X	X	X	X	X	X	
Check rear tire pressure, inspect tread	X	X	X	X	X	X	X	X	X	X	X	1
Inspect and adjust drive belt and sprockets	X	X	X	X	X	X	X	X	X	X	X	2
Check rear axle nut torque	X		X		X		X		X		X	1, 2, 6
Inspect exhaust system for leaks, cracks and loose, or missing fasteners or exhaust shields	X	X	X	X	X	X	X	X	X	X	X	3
Battery	Check battery, terminal torque and clean connections annually. Lubricate terminals with ELECTRICAL CONTACT LUBRICANT.											1
Spark plugs	Replace spark plugs every two years or every 30,000 mi (48,000 km), whichever comes first.											
Lubricate Fuel door hinge and latch with HARLEY LUBE	X	X	X	X	X	X	X	X	X	X	X	
Rebuild front forks											X	2, 8
Fuel filter	Replace fuel filter every 100000 mi (161,000 km).											2, 3
Rear sprocket isolators	Inspect rear sprocket isolators for wear at each rear tire change.											
Road test to verify component and system functions	X	X	X	X	X	X	X	X	X	X	X	
<b>NOTES:</b>	<p>1. Perform annually or at specified intervals, whichever comes first.</p> <p>2. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified.</p> <p>3. Perform maintenance more frequently in severe riding conditions such as extreme temperatures, dusty environments, mountainous or rough roads, long storage conditions, short runs, heavy stop/go traffic or poor fuel quality.</p> <p>4. Brake fluid level will drop as brake pads wear.</p> <p>5. Clutch fluid level will rise as clutch wears.</p> <p>6. For torque instructions, see Shop Practices in the service manual.</p> <p>7. Disassemble, lubricate, inspect and adjust every 25000 mi (40,000 km).</p> <p>8. Disassemble, inspect, rebuild forks and replace fork oil every 50000 mi (80,000 km).</p>											

## Maintenance Records

Maintain a record of this service to keep your new motorcycle limited warranty in force. Refer to Table 2-4.

**Table 2-4. Owner's Maintenance Records**

SERVICE MILE INTERVAL	DATE	DEALER NUMBER	TECHNICIAN NAME	TECHNICIAN SIGNATURE
1,000 mi (1,600 km)				
5,000 mi (8,000 km)				
10,000 mi (16,000 km)				
15,000 mi (24,000 km)				
20,000 mi (32,000 km)				
25,000 mi (40,000 km)				
30,000 mi (48,000 km)				
35,000 mi (56,000 km)				
40,000 mi (64,000 km)				
45,000 mi (72,000 km)				
50,000 mi (80,000 km)				

## CVO ULTRA MODELS

### Regular Service Intervals

Service must be performed at specified intervals to keep your Harley-Davidson motorcycle operating at peak performance. Refer to Table 2-5.

**NOTE**

- The use of parts and service procedures other than Harley-Davidson approved parts and service procedures may void the limited warranty. Any alterations to the emission system components, such as the intake and exhaust system, may be in violation of motor vehicle laws.

- Some countries, such as Brazil, may require all regular maintenance to be performed by an authorized Harley-Davidson dealer for your limited warranty to remain in effect. Check with your authorized Harley-Davidson dealer.
- Some countries, such as Brazil, may require additional annual (or semi-annual) regular maintenance steps to be performed to keep your limited warranty in effect and/or comply with vehicle regulations. Check with your authorized Harley-Davidson dealer as well as the motorcycle regulations in your country.
- After completing the final service interval, repeat the service schedule starting at the 8000 km (5000 mi) interval.
- Whenever a vehicle is in for maintenance, always check for and complete recalls and open product programs.
- Whenever a vehicle is in for maintenance, always verify that the latest calibration is installed.

**Table 2-5. Regular Service Intervals: Harley-Davidson FLHTKSE**

ITEM SERVICED	1000 MI 1600 KM	5000 MI 8000 KM	10000 MI 16000 KM	15000 MI 24000 KM	20000 MI 32000 KM	25000 MI 40000 KM	30000 MI 48000 KM	35000 MI 56000 KM	40000 MI 64000 KM	45000 MI 72000 KM	50000 MI 80000 KM	NOTES
Check operation of electrical equipment and switches	X	X	X	X	X	X	X	X	X	X	X	
Check front tire pressure, inspect tread	X	X	X	X	X	X	X	X	X	X	X	1
Inspect front brake fluid level	X	X	X	X	X	X	X	X	X	X	X	4
Check DOT4 clutch fluid and front brake fluid for moisture	X	X	X	X	X	X	X	X	X	X	X	2, 1
Inspect clutch fluid system for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	5
Check hand control fastener switch housing screw torque	X		X		X		X		X		X	1, 2, 6
Check clutch lever bracket handlebar clamp screw torque	X		X		X		X		X		X	1, 2, 6
Check master cylinder handlebar clamp screw torque	X		X		X		X		X		X	1, 2, 6
Inspect, lubricate and adjust steering head bearings						X					X	2, 7
Inspect air cleaner, service as required		X	X	X	X	X	X	X	X	X	X	3
Replace engine oil and filter	X	X	X	X	X	X	X	X	X	X	X	1, 3
Check engine coolant freeze point, inspect for leaks	X	X	X	X	X	X	X	X	X	X	X	
Coolant	Replace coolant every 30000 mi (48,000 km)											2
Clean radiators	X	X	X	X	X	X	X	X	X	X	X	
Replace primary chaincase lubricant	X		X		X		X		X		X	3
Replace transmission lubricant	X				X				X			3
Inspect oil lines and brake system for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	1, 2

**Table 2-5. Regular Service Intervals: Harley-Davidson FLHTKSE**

ITEM SERVICED	1000 MI 1600 KM	5000 MI 8000 KM	10000 MI 16000 KM	15000 MI 24000 KM	20000 MI 32000 KM	25000 MI 40000 KM	30000 MI 48000 KM	35000 MI 56000 KM	40000 MI 64000 KM	45000 MI 72000 KM	50000 MI 80000 KM	NOTES
Inspect fuel lines and fittings for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	1, 2
Inspect rear brake fluid level	X	X	X	X	X	X	X	X	X	X	X	
Check DOT 4 rear brake fluid for moisture	X	X	X	X	X	X	X	X	X	X	X	1, 2
Brake and clutch systems	Flush brake and clutch systems and replace DOT 4 hydraulic brake and clutch fluids every two years or sooner if moisture content is 3% or greater											2
Inspect brake pads and discs for wear	X	X	X	X	X	X	X	X	X	X	X	4
Check front axle nut torque	X		X		X		X		X		X	1, 2, 6
Inspect and lubricate jiffy stand	X	X	X	X	X	X	X	X	X	X	X	2, 3
Check, adjust and lubricate (with HARLEY LUBE) brake and clutch controls	X	X	X	X	X	X	X	X	X	X	X	
Check rear tire pressure, inspect tread	X	X	X	X	X	X	X	X	X	X	X	1
Inspect and adjust drive belt and sprockets	X	X	X	X	X	X	X	X	X	X	X	2
Check rear axle nut torque	X		X		X		X		X		X	1, 2, 6
Inspect exhaust system for leaks, cracks and loose, or missing fasteners or exhaust shields	X	X	X	X	X	X	X	X	X	X	X	3
Battery	Check battery, terminal torque and clean connections annually. Lubricate terminals with ELECTRICAL CONTACT LUBRICANT.											1
Spark Plugs	Replace spark plugs every two years or every 30,000 mi (48,000 km), whichever comes first.											
Lubricate Fuel door hinge and latch with HARLEY LUBE	X	X	X	X	X	X	X	X	X	X	X	
Rebuild front forks											X	2, 8
Fuel filter	Replace fuel filter every 100000 mi (161,000 km).											2, 3
Rear sprocket isolators	Inspect rear sprocket isolators for wear at each rear tire change.											
Road test to verify component and system functions	X	X	X	X	X	X	X	X	X	X	X	
<b>NOTES:</b>	1. Perform annually or at specified intervals, whichever comes first. 2. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 3. Perform maintenance more frequently in severe riding conditions such as extreme temperatures, dusty environments, mountainous or rough roads, long storage conditions, short runs, heavy stop/go traffic or poor fuel quality. 4. Brake fluid level will drop as brake pads wear. 5. Clutch fluid level will rise as clutch wears. 6. For torque instructions, see Shop Practices in the service manual. 7. Disassemble, lubricate, inspect and adjust every 25000 mi (40,000 km). 8. Disassemble, inspect, rebuild forks and replace fork oil every 50000 mi (80,000 km).											

**Maintenance Records**

Maintain a record of this service to keep your new motorcycle limited warranty in force. Refer to Table 2-6.

**Table 2-6. Owner's Maintenance Records**

SERVICE MILE INTERVAL	DATE	DEALER NUMBER	TECHNICIAN NAME	TECHNICIAN SIGNATURE
1,000 mi (1,600 km)				
5,000 mi (8,000 km)				
10,000 mi (16,000 km)				
15,000 mi (24,000 km)				
20,000 mi (32,000 km)				
25,000 mi (40,000 km)				
30,000 mi (48,000 km)				
35,000 mi (56,000 km)				
40,000 mi (64,000 km)				
45,000 mi (72,000 km)				
50,000 mi (80,000 km)				

**CVO STREET GLIDE MODELS**

**Regular Service Intervals**

Service must be performed at specified intervals to keep your Harley-Davidson motorcycle operating at peak performance. Refer to Table 2-7.

**NOTE**

- The use of parts and service procedures other than Harley-Davidson approved parts and service procedures may void the limited warranty. Any alterations to the emission system components, such as the intake and exhaust system, may be in violation of motor vehicle laws.

- Some countries, such as Brazil, may require all regular maintenance to be performed by an authorized Harley-Davidson dealer for your limited warranty to remain in effect. Check with your authorized Harley-Davidson dealer.
- Some countries, such as Brazil, may require additional annual (or semi-annual) regular maintenance steps to be performed to keep your limited warranty in effect and/or comply with vehicle regulations. Check with your authorized Harley-Davidson dealer as well as the motorcycle regulations in your country.
- After completing the final service interval, repeat the service schedule starting at the 8000 km (5000 mi) interval.
- Whenever a vehicle is in for maintenance, always check for and complete recalls and open product programs.
- Whenever a vehicle is in for maintenance, always verify that the latest calibration is installed.

**Table 2-7. Regular Service Intervals: Harley-Davidson FLHXSE**

ITEM SERVICED	1000 mi 1600 km	5000 mi 8000 km	10000 mi 16000 km	15000 mi 24000 km	20000 mi 32000 km	25000 mi 40000 km	30000 mi 48000 km	35000 mi 56000 km	40000 mi 64000 km	45000 mi 72000 km	50000 mi 80000 km	NOTES
Check operation of electrical equipment and switches	X	X	X	X	X	X	X	X	X	X	X	
Check front tire pressure, inspect tread	X	X	X	X	X	X	X	X	X	X	X	1
Inspect front brake fluid level	X	X	X	X	X	X	X	X	X	X	X	4
Check DOT4 clutch fluid and front brake fluid for moisture	X	X	X	X	X	X	X	X	X	X	X	1, 2
Inspect clutch fluid system for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	5
Check hand control fastener switch housing screw torque	X		X		X		X		X		X	1, 2, 6
Check clutch lever bracket handlebar clamp screw torque	X		X		X		X		X		X	1, 2, 6
Check master cylinder handlebar clamp screw torque	X		X		X		X		X		X	1, 2, 6
Inspect, lubricate and adjust steering head bearings						X					X	2, 7
Inspect air cleaner, service as required		X	X	X	X	X	X	X	X	X	X	3
Replace engine oil and filter	X	X	X	X	X	X	X	X	X	X	X	1, 3
Replace primary chaincase lubricant	X		X		X		X		X		X	3
Replace transmission lubricant	X				X				X			3
Inspect oil lines and brake system for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	1, 2
Inspect fuel lines and fittings for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	1, 2
Inspect rear brake fluid level	X	X	X	X	X	X	X	X	X	X	X	4
Check DOT 4 rear brake fluid for moisture	X	X	X	X	X	X	X	X	X	X	X	1, 2
Brake and clutch systems	Flush brake and clutch systems and replace DOT 4 hydraulic brake and clutch fluids every two years or sooner if moisture content is 3% or greater											2
Inspect brake pads and discs for wear	X	X	X	X	X	X	X	X	X	X	X	
Check front axle nut torque	X		X		X		X		X		X	1, 2, 6
Inspect and lubricate jiffy stand	X	X	X	X	X	X	X	X	X	X	X	2, 3
Check, adjust and lubricate (with HARLEY LUBE) brake and clutch controls	X	X	X	X	X	X	X	X	X	X	X	
Check rear tire pressure, inspect tread	X	X	X	X	X	X	X	X	X	X	X	1
Inspect and adjust drive belt and sprockets	X	X	X	X	X	X	X	X	X	X	X	2
Check rear axle nut torque	X		X		X		X		X		X	1, 2, 6
Inspect exhaust system for leaks, cracks and loose, or missing fasteners or exhaust shields	X	X	X	X	X	X	X	X	X	X	X	3
Battery	Check battery, terminal torque and clean connections annually. Lubricate terminals with ELECTRICAL CONTACT LUBRICANT											1
Spark plugs	Replace spark plugs every two years or every 30000 mi (48,000 km), whichever comes first.											
Rebuild front forks											X	2, 8
Fuel Filter	Replace fuel filter every 100000 mi (161,000 km).											2, 3
Rear sprocket isolators	Inspect rear sprocket isolators for wear at each rear tire change.											

**Table 2-7. Regular Service Intervals: Harley-Davidson FLHXSE**

ITEM SERVICED	1000 mi	5000 mi	10000 mi	15000 mi	20000 mi	25000 mi	30000 mi	35000 mi	40000 mi	45000 mi	50000 mi	NOTES
	1600 km	8000 km	16000 km	24000 km	32000 km	40000 km	48000 km	56000 km	64000 km	72000 km	80000 km	
Road test to verify component and system functions	X	X	X	X	X	X	X	X	X	X	X	
<b>NOTES:</b>	1. Perform annually or at specified intervals, whichever comes first. 2. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 3. Perform maintenance more frequently in severe riding conditions such as extreme temperatures, dusty environments, mountainous or rough roads, long storage conditions, short runs, heavy stop/go traffic or poor fuel quality. 4. Brake fluid level will drop as brake pads wear. 5. Clutch fluid level will rise as clutch wears. 6. For torque instructions, see Shop Practices in the service manual. 7. Disassemble, lubricate, inspect and adjust every 25000 mi (40,000 km). 8. Disassemble, inspect, rebuild forks and replace fork oil every 50000 mi (80,000 km).											

**Maintenance Records**

Maintain a record of this service to keep your new motorcycle limited warranty in force. Refer to Table 2-8.

**Table 2-8. Owner's Maintenance Records**

SERVICE MILE INTERVAL	DATE	DEALER NUMBER	TECHNICIAN NAME	TECHNICIAN SIGNATURE
1,000 mi (1,600 km)				
5,000 mi (8,000 km)				
10,000 mi (16,000 km)				
15,000 mi (24,000 km)				
20,000 mi (32,000 km)				
25,000 mi (40,000 km)				
30,000 mi (48,000 km)				
35,000 mi (56,000 km)				
40,000 mi (64,000 km)				
45,000 mi (72,000 km)				
50,000 mi (80,000 km)				

**CVO ROAD GLIDE MODELS**

**Regular Service Intervals**

Service must be performed at specified intervals to keep your Harley-Davidson motorcycle operating at peak performance. Refer to Table 2-9.

*NOTE*

- The use of parts and service procedures other than Harley-Davidson approved parts and service procedures may void the limited warranty. Any alterations to the emission system components, such as the intake and exhaust system, may be in violation of motor vehicle laws.

- Some countries, such as Brazil, may require all regular maintenance to be performed by an authorized Harley-Davidson dealer for your limited warranty to remain in effect. Check with your authorized Harley-Davidson dealer.
- Some countries, such as Brazil, may require additional annual (or semi-annual) regular maintenance steps to be performed to keep your limited warranty in effect and/or comply with vehicle regulations. Check with your authorized Harley-Davidson dealer as well as the motorcycle regulations in your country.
- After completing the final service interval, repeat the service schedule starting at the 8000 km (5000 mi) interval.
- Whenever a vehicle is in for maintenance, always check for and complete recalls and open product programs.
- Whenever a vehicle is in for maintenance, always verify that the latest calibration is installed.

**Table 2-9. Regular Service Intervals: Harley-Davidson FLTRXSE**

ITEM SERVICED	1000 mi	5000 mi	10000 mi	15000 mi	20000 mi	25000 mi	30000 mi	35000 mi	40000 mi	45000 mi	50000 mi	NOTES
	1600 km	8000 km	16000 km	24000 km	32000 km	40000 km	48000 km	56000 km	64000 km	72000 km	80000 km	
Check operation of electrical equipment and switches	X	X	X	X	X	X	X	X	X	X	X	
Check front tire pressure, inspect tread	X	X	X	X	X	X	X	X	X	X	X	1
Inspect front brake fluid level	X	X	X	X	X	X	X	X	X	X	X	4
Check DOT4 clutch fluid and front brake fluid for moisture	X	X	X	X	X	X	X	X	X	X	X	1, 2
Inspect clutch fluid system for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	5
Check hand control fastener switch housing screw torque	X		X		X		X		X		X	1, 2, 6
Check clutch lever bracket handlebar clamp screw torque	X		X		X		X		X		X	1, 2, 6

**Table 2-9. Regular Service Intervals: Harley-Davidson FLTRXSE**

ITEM SERVICED	1000 mi 1600 km	5000 mi 8000 km	10000 mi 16000 km	15000 mi 24000 km	20000 mi 32000 km	25000 mi 40000 km	30000 mi 48000 km	35000 mi 56000 km	40000 mi 64000 km	45000 mi 72000 km	50000 mi 80000 km	NOTES
Check master cylinder handlebar clamp screw torque	X		X		X		X		X		X	1, 2, 6
Inspect, lubricate and adjust steering head bearings						X					X	2, 7
Inspect air cleaner, service as required		X	X	X	X	X	X	X	X	X	X	3
Replace engine oil and filter	X	X	X	X	X	X	X	X	X	X	X	1, 3
Replace primary chaincase lubricant	X		X		X		X		X		X	3
Replace transmission lubricant	X				X				X			3
Inspect oil lines and brake system for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	1, 2
Inspect fuel lines and fittings for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	1, 2
Inspect rear brake fluid level	X	X	X	X	X	X	X	X	X	X	X	4
Check DOT 4 rear brake fluid for moisture	X	X	X	X	X	X	X	X	X	X	X	1, 2
Brake and clutch systems	Flush brake and clutch systems and replace DOT 4 hydraulic brake and clutch fluids every two years or sooner if moisture content is 3% or greater											2
Inspect brake pads and discs for wear	X	X	X	X	X	X	X	X	X	X	X	
Check front axle nut torque	X		X		X		X		X		X	1, 2, 6
Inspect and lubricate jiffy stand	X	X	X	X	X	X	X	X	X	X	X	2, 3
Check, adjust and lubricate (with HARLEY LUBE) brake and clutch controls	X	X	X	X	X	X	X	X	X	X	X	
Check rear tire pressure, inspect tread	X	X	X	X	X	X	X	X	X	X	X	1
Inspect and adjust drive belt and sprockets	X	X	X	X	X	X	X	X	X	X	X	2
Check rear axle nut torque	X		X		X		X		X		X	1, 2, 6
Inspect exhaust system for leaks, cracks and loose, or missing fasteners or exhaust shields	X	X	X	X	X	X	X	X	X	X	X	3
Battery	Check battery, terminal torque and clean connections annually. Lubricate terminals with ELECTRICAL CONTACT LUBRICANT											1
Spark plugs	Replace spark plugs every two years or every 30000 mi (48,000 km), whichever comes first.											
Rebuild front forks											X	2, 8
Fuel Filter	Replace fuel filter every 100000 mi (161,000 km).											2, 3
Rear sprocket isolators	Inspect rear sprocket isolators for wear at each rear tire change.											
Road test to verify component and system functions	X	X	X	X	X	X	X	X	X	X	X	
<b>NOTES:</b>	1. Perform annually or at specified intervals, whichever comes first. 2. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 3. Perform maintenance more frequently in severe riding conditions such as extreme temperatures, dusty environments, mountainous or rough roads, long storage conditions, short runs, heavy stop/go traffic or poor fuel quality. 4. Brake fluid level will drop as brake pads wear. 5. Clutch fluid level will rise as clutch wears. 6. For torque instructions, see Shop Practices in the service manual. 7. Disassemble, lubricate, inspect and adjust every 25000 mi (40,000 km). 8. Disassemble, inspect, rebuild forks and replace fork oil every 50000 mi (80,000 km).											

**Maintenance Records**

Maintain a record of this service to keep your new motorcycle limited warranty in force. Refer to Table 2-10.

**Table 2-10. Owner's Maintenance Records**

SERVICE MILE INTERVAL	DATE	DEALER NUMBER	TECHNICIAN NAME	TECHNICIAN SIGNATURE
1,000 mi (1,600 km)				
5,000 mi (8,000 km)				
10,000 mi (16,000 km)				
15,000 mi (24,000 km)				
20,000 mi (32,000 km)				
25,000 mi (40,000 km)				
30,000 mi (48,000 km)				
35,000 mi (56,000 km)				
40,000 mi (64,000 km)				
45,000 mi (72,000 km)				
50,000 mi (80,000 km)				

**SUBJECT**

3.1 MAINTENANCE SCHEDULE.....

**PAGE NO.**

3-1

## NOTES

---

## SOFTAIL MODELS

### Regular Service Intervals

Service must be performed at specified intervals to keep your Harley-Davidson motorcycle operating at peak performance. Refer to Table 3-1.

**NOTE**

- The use of parts and service procedures other than Harley-Davidson approved parts and service procedures may void the limited warranty. Any alterations to the emission system components, such as the intake and exhaust system, may be in violation of motor vehicle laws.

- Some countries, such as Brazil, may require all regular maintenance to be performed by an authorized Harley-Davidson dealer for your limited warranty to remain in effect. Check with your authorized Harley-Davidson dealer.
- Some countries, such as Brazil, may require additional annual (or semi-annual) regular maintenance steps to be performed to keep your limited warranty in effect and/or comply with vehicle regulations. Check with your authorized Harley-Davidson dealer as well as the motorcycle regulations in your country.
- After completing the final service interval, repeat the service schedule starting at the 8000 km (5000 mi) interval.
- Whenever a vehicle is in for maintenance, always check for and complete recalls and open product programs.
- Whenever a vehicle is in for maintenance, always verify that the latest calibration is installed.

**Table 3-1. Regular Service Intervals: Harley-Davidson Softail Models**

ITEM SERVICED	1000 mi 1600 km	5000 mi 8000 km	10000 mi 16000 km	15000 mi 24000 km	20000 mi 32000 km	25000 mi 40000 km	30000 mi 48000 km	35000 mi 56000 km	40000 mi 64000 km	45000 mi 72000 km	50000 mi 80000 km	NOTES
Check operation of electrical equipment and switches	X	X	X	X	X	X	X	X	X	X	X	
Check front tire pressure, inspect tread	X	X	X	X	X	X	X	X	X	X	X	1
Check front wheel spoke torque (if equipped)	X	X			X			X			X	2, 3, 4
Inspect front brake fluid level	X	X	X	X	X	X	X	X	X	X	X	
Check DOT4 front brake fluid for moisture	X	X	X	X	X	X	X	X	X	X	X	1, 2
Adjust steering head bearings	X		X		X		X		X		X	2
Lubricate steering head bearings							X					2, 6
Inspect windshield bushings (if applicable)			X		X		X		X		X	
Check upper and lower switch housing screw torque	X		X		X		X		X		X	1, 2, 5
Check clutch lever handlebar clamp screw torque	X		X		X		X		X		X	1, 2, 5
Check master cylinder handlebar clamp screw torque	X		X		X		X		X		X	1, 2, 5
Inspect air cleaner, service as required		X	X	X	X	X	X	X	X	X	X	4
Replace engine oil and filter	X	X	X	X	X	X	X	X	X	X	X	1, 4
Clean and inspect oil cooler	X	X	X	X	X	X	X	X	X	X	X	
Replace primary chaincase lubricant	X		X		X		X		X		X	4
Replace transmission lubricant	X				X				X			4
Inspect oil lines and brake system for leaks, contact, or abrasion	X	X	X	X	X	X	X	X	X	X	X	1, 2
Inspect fuel lines and fittings for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	1, 2
Inspect rear brake fluid level	X	X	X	X	X	X	X	X	X	X	X	
Check DOT 4 rear brake fluid for moisture	X	X	X	X	X	X	X	X	X	X	X	1, 2
Inspect brake pads and discs for wear	X	X	X	X	X	X	X	X	X	X	X	
Check front axle torque	X		X		X		X		X		X	1, 2, 5
Inspect and lubricate jiffy stand	X	X	X	X	X	X	X	X	X	X	X	2, 4
Check clutch adjustment	X	X	X	X	X	X	X	X	X	X	X	2, 4
Check, adjust and lubricate brake and clutch controls	X	X	X	X	X	X	X	X	X	X	X	
Check rear wheel spoke torque (if equipped)	X	X			X			X			X	2, 3, 4
Check rear tire pressure, inspect tread	X	X	X	X	X	X	X	X	X	X	X	1

**Table 3-1. Regular Service Intervals: Harley-Davidson Softail Models**

ITEM SERVICED	1000 mi 1600 km	5000 mi 8000 km	10000 mi 16000 km	15000 mi 24000 km	20000 mi 32000 km	25000 mi 40000 km	30000 mi 48000 km	35000 mi 56000 km	40000 mi 64000 km	45000 mi 72000 km	50000 mi 80000 km	NOTES
Check rear fork spacer bolt torque	X		X		X		X		X		X	1,2,5
Inspect drive belt and sprockets, adjust belt	X	X	X	X	X	X	X	X	X	X	X	2
Check rear axle nut torque	X		X		X		X		X		X	1, 2, 5
Inspect exhaust system for leaks, cracks, and loose or missing fasteners or exhaust shields	X	X	X	X	X	X	X	X	X	X	X	1, 4
Battery	Check battery, terminal torque and clean connections annually.											1
Spark plugs	Replace spark plugs every two years or every 30000 mi (48,000 km), whichever comes first.											
Front forks	Disassemble, inspect, rebuild front forks and replace fork oil every 50000 mi (80,000 km).											2
Fuel filter	Replace fuel filter every 100000 mi (161,000 km).											2, 4
Brake system	Flush brake and clutch systems and replace DOT 4 hydraulic brake and clutch fluids every two years or sooner if moisture content is 3% or greater											2
Road test to verify component and system functions	X	X	X	X	X	X	X	X	X	X	X	
<b>NOTES:</b>	1. Perform annually or at specified intervals, whichever comes first. 2. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 3. Perform spoke tension check at the 1000 mi (2,000 km), 5000 mi (8,000 km), 20000 mi (32,000 km) services and every 15000 mi (24,000 km) interval thereafter. Not all vehicles are equipped with spoke wheels. Consult appropriate topic in service manual. 4. Perform maintenance more frequently in severe riding conditions (such as extreme temperatures, dusty environments, mountainous or rough roads, long storage conditions, short runs, heavy stop/go traffic or poor fuel quality). 5. For torque instructions, see Shop Practices in the service manual. 6. Disassemble, lubricate and inspect every 30000 mi (48,000 km).											

**Maintenance Records**

Maintain a record of this service to keep your new motorcycle limited warranty in force. Refer to Table 3-2.

**Table 3-2. Owner's Maintenance Records**

SERVICE MILE INTERVAL	DATE	DEALER NUMBER	TECHNICIAN NAME	TECHNICIAN SIGNATURE
1,000 mi (1,600 km)				
5,000 mi (8,000 km)				
10,000 mi (16,000 km)				
15,000 mi (24,000 km)				
20,000 mi (32,000 km)				
25,000 mi (40,000 km)				
30,000 mi (48,000 km)				
35,000 mi (56,000 km)				
40,000 mi (64,000 km)				
45,000 mi (72,000 km)				
50,000 mi (80,000 km)				

**SUBJECT**

4.1 MAINTENANCE SCHEDULE.....

**PAGE NO.**

4-1

## NOTES

---

## TRIKE MODELS

### Regular Service Intervals

#### ▲ WARNING

Perform the service and maintenance operations as indicated in the regular service interval table. Lack of regular maintenance at the recommended intervals can affect the safe operation of your motorcycle, which could result in death or serious injury. (00010a)

#### ▲ WARNING

If you operate your motorcycle under adverse conditions (severe cold, extreme heat, very dusty environment, very bad roads, through standing water, etc.), you should perform the regular maintenance intervals more frequently to ensure the safe operation of your motorcycle. Failure to maintain your motorcycle could result in death or serious injury. (00094a)

Regular maintenance must be performed at specified intervals to help keep your new Harley-Davidson motorcycle operating at peak performance and keep your new motorcycle limited warranty in force. Your authorized Harley-Davidson dealer knows best how to service your motorcycle with factory approved methods and equipment assuring you of thorough and competent workmanship.

Some maintenance items are scheduled at least once per year, even if the next mileage interval has not been reached. In

severe riding conditions, some maintenance items need to be performed more frequently. Refer to Table 4-1.

#### NOTE

- The use of parts and service procedures other than Harley-Davidson approved parts and service procedures may void the limited warranty. Any alterations to the emission system components, such as the intake and exhaust system, may be in violation of motor vehicle laws.
- Some countries, such as Brazil, may require all regular maintenance to be performed by an authorized Harley-Davidson dealer for your limited warranty to remain in effect. Check with your authorized Harley-Davidson dealer.
- Some countries, such as Brazil, require additional annual (or semi-annual) regular maintenance steps to keep your limited warranty in effect and/or comply with vehicle regulations. Check with your authorized Harley-Davidson dealer and the motorcycle regulations in your country for local requirements.
- After completing the final service interval, repeat the service schedule starting at the 5000 mi (8,000 km) interval. Refer to Table 4-1.
- Whenever a vehicle is in for maintenance, always check for and complete open recalls and product programs.
- Whenever a vehicle is in for maintenance, always verify that the latest calibration is installed.

**Table 4-1. Regular Service Intervals: Harley-Davidson Trike Models**

ITEM SERVICED	1000 MI 1600 KM	5000 MI 8000 KM	10000 MI 16000 KM	15000 MI 24000 KM	20000 MI 32000 KM	25000 MI 40000 KM	30000 MI 48000 KM	35000 MI 56000 KM	40000 MI 64000 KM	45000 MI 72000 KM	50000 MI 80000 KM	NOTES
Check operation of electrical equipment and switches	X	X	X	X	X	X	X	X	X	X	X	
Check front tire pressure, inspect tread	X	X	X	X	X	X	X	X	X	X	X	1
Inspect front brake fluid level	X	X	X	X	X	X	X	X	X	X	X	2
Inspect clutch fluid system for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	3
Check DOT4 clutch fluid and front brake fluid for moisture	X	X	X	X	X	X	X	X	X	X	X	1, 4
Check hand control fastener switch housing screw torque	X		X		X		X		X		X	1, 4, 5
Check clutch lever handlebar clamp screw torque	X		X		X		X		X		X	1, 4, 5
Check front brake handlebar clamp screw torque	X		X		X		X		X		X	1, 4, 5
Inspect, lubricate and adjust steering head bearings						X					X	4, 6
Check hydraulic steering damper for leaks, smooth damper action and mounting fastener torque	X	X	X	X	X	X	X	X	X	X	X	7
Inspect air cleaner, service as required		X	X	X	X	X	X	X	X	X	X	8
Replace engine oil and filter	X	X	X	X	X	X	X	X	X	X	X	1, 8
Check oil pan fastener torque	X											5
Check engine coolant freeze point, inspect for leaks	X	X	X	X	X	X	X	X	X	X	X	
Coolant	Replace coolant every 30,000 mi (48,000 km)											4
Clean radiators or oil cooler	X	X	X	X	X	X	X	X	X	X	X	
Replace primary chaincase lubricant	X		X		X		X		X		X	8
Replace transmission lubricant	X				X				X			8
Inspect oil lines and brake system for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	1, 4

**Table 4-1. Regular Service Intervals: Harley-Davidson Trike Models**

ITEM SERVICED	1000 MI 1600 KM	5000 MI 8000 KM	10000 MI 16000 KM	15000 MI 24000 KM	20000 MI 32000 KM	25000 MI 40000 KM	30000 MI 48000 KM	35000 MI 56000 KM	40000 MI 64000 KM	45000 MI 72000 KM	50000 MI 80000 KM	NOTES
Inspect fuel lines and fittings for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	1, 4
Inspect rear brake fluid level	X	X	X	X	X	X	X	X	X	X	X	2
Check DOT4 rear brake fluid for moisture	X	X	X	X	X	X	X	X	X	X	X	1, 4
Brake and clutch systems	Flush brake and clutch systems and replace DOT 4 hydraulic brake and clutch fluids every two years or sooner if moisture content is 3% or greater											4
Inspect brake pads and discs for wear	X	X	X	X	X	X	X	X	X	X	X	
Check front brake and clutch master cylinder banjo bolt torque	X		X		X		X		X		X	1, 4, 5
Check front circuit manifold banjo bolt torque (12 mm)	X		X		X		X		X		X	1, 4, 5
Check front caliper banjo bolt torque	X		X		X		X		X		X	1, 4, 5
Check rear master cylinder banjo bolt torque	X		X		X		X		X		X	1, 4, 5
Check rear caliper banjo bolt torque	X		X		X		X		X		X	1, 4, 5
Check rear circuit manifold banjo bolt torque (10 mm)	X		X		X		X		X		X	1, 4, 5
Check, adjust and lubricate (with HARLEY LUBE) brake and clutch controls	X	X	X	X	X	X	X	X	X	X	X	4
Inspect and adjust parking brake	X	X	X	X	X	X	X	X	X	X	X	4
Check rear tire pressure, inspect tread	X	X	X	X	X	X	X	X	X	X	X	1
Inspect and adjust drive belt and sprockets	X	X	X	X	X	X	X	X	X	X	X	4
Inspect rear sprocket isolators for wear					X				X			4
Check rear lug nut torque	X		X		X		X		X		X	1, 4, 5, 9
Check rear fork pivot shaft nut torque	X		X		X		X		X		X	1, 4, 5
Check air suspension pressure, operation and leakage	X	X	X	X	X	X	X	X	X	X	X	1, 4, 8
Inspect exhaust system for leaks, cracks and loose, or missing fasteners or exhaust shields	X	X	X	X	X	X	X	X	X	X	X	1, 8
Battery	Check battery, terminal torque and clean connections annually.											1
Battery terminals	Lubricate battery terminals with ELECTRICAL CONTACT LUBRICANT annually.											1
Spark plugs	Replace spark plugs every two years or every 30,000 mi (48,000 km), whichever comes first.											
Lubricate fuel door hinge and latch with HARLEY LUBE	X	X	X	X	X	X	X	X	X	X	X	
Lubricate trunk lock and latch with HARLEY LUBE	X	X	X	X	X	X	X	X	X	X	X	
Rebuild front forks											X	5, 10
Fuel Filter	Replace fuel filter every 100,000 mi (161,000 km).											5, 8
Check reverse operation at each service interval	X	X	X	X	X	X	X	X	X	X	X	
Road test to verify component and system functions	X	X	X	X	X	X	X	X	X	X	X	
<b>NOTES:</b>	1. Perform annually or at specified intervals, whichever comes first. 2. Brake fluid level will drop as brake pads wear. 3. Clutch fluid level will rise as clutch wears. 4. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 5. For torque instructions, see Shop Practices in the service manual. 6. Disassemble, inspect, lubricate and adjust every 25,000 mi (40,000 km). 7. Replace or have rebuilt at 50,000 mi (80,000 km). 8. Perform maintenance more frequently in severe riding conditions such as extreme temperatures, dusty environments, mountainous or rough roads, long storage conditions, short runs, heavy stop/go traffic or poor fuel quality. 9. Always check lug nut torque within 500–1,000 mi (800–1,600 km) after wheel installation. 10. Disassemble, inspect, rebuild forks and replace fork oil every 50,000 mi (80,000 km).											

**Maintenance Records**

Maintain a record of all service. Refer to Table 4-2.

**Table 4-2. Owner's Maintenance Records**

SERVICE MILE INTERVAL	DATE	DEALER NUMBER	TECHNICIAN NAME	TECHNICIAN SIGNATURE
1,000 mi (1,600 km)				
5,000 mi (8,000 km)				

**Table 4-2. Owner's Maintenance Records**

<b>SERVICE MILE INTERVAL</b>	<b>DATE</b>	<b>DEALER NUMBER</b>	<b>TECHNICIAN NAME</b>	<b>TECHNICIAN SIGNATURE</b>
10,000 mi (16,000 km)				
15,000 mi (24,000 km)				
20,000 mi (32,000 km)				
25,000 mi (40,000 km)				
30,000 mi (48,000 km)				
35,000 mi (56,000 km)				
40,000 mi (64,000 km)				
45,000 mi (72,000 km)				
50,000 mi (80,000 km)				

## NOTES

---

**SUBJECT**

5.1 MAINTENANCE SCHEDULE.....

**PAGE NO.**

5-1

## NOTES

---

## STREET MODELS

### Regular Service Intervals

Service must be performed at specified intervals to keep your Harley-Davidson motorcycle operating at peak performance. Refer to Table 5-1.

**NOTE**

- The use of parts and service procedures other than Harley-Davidson approved parts and service procedures may void the limited warranty. Any alterations to the emission system components, such as the intake and exhaust system, may be in violation of motor vehicle laws.

- Some countries, such as Brazil, may require all regular maintenance to be performed by an authorized Harley-Davidson dealer for your limited warranty to remain in effect. Check with your authorized Harley-Davidson dealer.
- Some countries, such as Brazil, may require additional annual (or semi-annual) regular maintenance steps to be performed to keep your limited warranty in effect and/or comply with vehicle regulations. Check with your authorized Harley-Davidson dealer as well as the motorcycle regulations in your country.
- After completing the final service interval, repeat the service schedule starting at the 8000 km (5000 mi) interval.
- Whenever a vehicle is in for maintenance, always check for and complete recalls and open product programs.
- Whenever a vehicle is in for maintenance, always verify that the latest calibration is installed.

**Table 5-1. Regular Service Intervals: Harley-Davidson Street Models**

ITEM SERVICED	1000 mi 1600 km	5000 mi 8000 km	10000 mi 16000 km	15000 mi 24000 km	20000 mi 32000 km	25000 mi 40000 km	30000 mi 48000 km	35000 mi 56000 km	40000 mi 64000 km	45000 mi 72000 km	50000 mi 80000 km	NOTES
Replace engine oil and filter	X	X	X	X	X	X	X	X	X	X	X	1
Check front tire pressure, inspect tread	X	X	X	X	X	X	X	X	X	X	X	1
Check front brake pads and discs for wear	X	X	X	X	X	X	X	X	X	X	X	
Inspect and lubricate front brake caliper pins and bushings	X	X	X	X	X	X	X	X	X	X	X	2
Check front brake system for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	1
Repair front brake system as necessary	X	X	X	X	X	X	X	X	X	X	X	2
Check front brake fluid level	X	X	X	X	X	X	X	X	X	X	X	
Check DOT4 front brake fluid for moisture	X	X	X	X	X	X	X	X	X	X	X	1, 2
Check and adjust throttle cables	X	X	X	X	X	X	X	X	X	X	X	2
Lubricate throttle cables	X	X	X	X	X	X	X	X	X	X	X	2
Check and adjust brake and clutch controls	X	X	X	X	X	X	X	X	X	X	X	2
Lubricate brake and clutch controls	X	X	X	X	X	X	X	X	X	X	X	2
Rebuild front forks and replace fork oil											X	2
Adjust steering head bearings	X				X				X			2
Lubricate steering head bearings					X				X			2
Clean radiator	X	X	X	X	X	X	X	X	X	X	X	
Check cooling system for leaks and check clamps for tightness	X	X	X	X	X	X	X	X	X	X	X	
Check coolant level	X	X	X	X	X	X	X	X	X	X	X	
Check coolant freeze point	X	X	X	X	X	X	X	X	X	X	X	2
Coolant	Replace coolant every 30000 mi (48,000 km).											2
Check fuel lines and fittings for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	1
Repair fuel lines and fittings as necessary	X	X	X	X	X	X	X	X	X	X	X	2
Check and lubricate jiffy stand	X	X	X	X	X	X	X	X	X	X	X	2, 3
Clean and lubricate shift and brake levers, inspect for wear					X				X			2
Inspect rear fork bearing					X				X			2
Inspect drive belt and sprockets, adjust belt	X	X	X	X	X	X	X	X	X	X	X	2
Check rear tire pressure, inspect tread	X	X	X	X	X	X	X	X	X	X	X	1

**Table 5-1. Regular Service Intervals: Harley-Davidson Street Models**

ITEM SERVICED	1000 mi 1600 km	5000 mi 8000 km	10000 mi 16000 km	15000 mi 24000 km	20000 mi 32000 km	25000 mi 40000 km	30000 mi 48000 km	35000 mi 56000 km	40000 mi 64000 km	45000 mi 72000 km	50000 mi 80000 km	NOTES
Inspect rear shock absorber bushings for wear and cracks					X				X			2
Check rear brake pads and disc for wear	X	X	X	X	X	X	X	X	X	X	X	1
Check rear brake system for leaks, contact or abrasion	X	X	X	X	X	X	X	X	X	X	X	1
Repair rear brake system as necessary	X	X	X	X	X	X	X	X	X	X	X	2
Inspect rear brake caliper and lubricate pins and bushings	X	X	X	X	X	X	X	X	X	X	X	2
Check rear brake fluid level	X	X	X	X	X	X	X	X	X	X	X	
Check DOT4 rear brake fluid for moisture	X	X	X	X	X	X	X	X	X	X	X	
Brake system	Flush brake system and replace DOT 4 hydraulic brake fluid every two years or sooner if moisture content is 3% or greater.											2
Check exhaust system for leaks, cracks and loose or missing fasteners or exhaust shields	X	X	X	X	X	X	X	X	X	X	X	1, 3
Repair exhaust system as necessary	X	X	X	X	X	X	X	X	X	X	X	2
Inspect air cleaner filter, service as required	X	X	X	X	X	X	X	X	X	X	X	3
Lubricate fuel cap lock	X	X	X	X	X	X	X	X	X	X	X	3
Inspect valve lash, adjust if necessary				X			X			X		2, 4
Battery	Check battery, terminal torque and clean connections annually.											1
Spark plugs	Replace spark plugs every two years or every 30000 mi (48,000 km), whichever comes first.											
Check operation of electrical equipment and switches	X	X	X	X	X	X	X	X	X	X	X	
Road test to verify component and system functions	X	X	X	X	X	X	X	X	X	X	X	
NOTES:	1. Perform annually or at specified intervals, whichever comes first. 2. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 3. Perform maintenance more frequently in severe riding conditions (such as extreme temperatures, dusty environments, mountainous or rough roads, long storage conditions, short runs, heavy stop/go traffic or poor fuel quality). 4. Could vary with frequency of operation and riding style.											

**Maintenance Records**

Maintain a record of this service to keep your new motorcycle limited warranty in force. Refer to Table 5-2.

**Table 5-2. Owner's Maintenance Records**

SERVICE MILE INTERVAL	DATE	DEALER NUMBER	TECHNICIAN NAME	TECHNICIAN SIGNATURE
1,000 mi (1,600 km)				
5,000 mi (8,000 km)				
10,000 mi (16,000 km)				
15,000 mi (24,000 km)				
20,000 mi (32,000 km)				
25,000 mi (40,000 km)				
30,000 mi (48,000 km)				
35,000 mi (56,000 km)				
40,000 mi (64,000 km)				
45,000 mi (72,000 km)				
50,000 mi (80,000 km)				