

2007 WIRING DIAGRAMS - TABLE OF CONTENTS

2007 Domestic and International Models	Page Number
XL 883, XL 883C, XL 883L, XL 883R, XL 1200C, XL 1200L, XL 1200N, XL 1200R, XL50	
Main Harness	1
Indicator Lamps and Controls.....	2
Starting and Charging.....	3C
Engine Management (Sheet 1 of 2).....	4C
Engine Management (Sheet 2 of 2).....	5C
Lights (Sheet 1 of 2)	6C
Lights (Sheet 2 of 2)	7C
Horn and Instruments.....	8C
Security (Sheet 1 of 2).....	9C
Security (Sheet 2 of 2).....	10C
FLSTC, FLSTF, FLSTN, FLSTSC, FXST, FXSTB, FXSTC, FXSTD	
Main Harness (Sheet 1 of 3).....	11
Main Harness (Sheet 2 of 3).....	12
Main Harness (Sheet 3 of 3).....	13
Ignition Circuit.....	14C
Lights (Sheet 1 of 2)	15C
Lights (Sheet 2 of 2)	16C
Horn and Instruments.....	17C
Starting	18C
Charging	19C
Security (Sheet 1 of 2).....	20C
Security (Sheet 2 of 2).....	21C
FXD, FXDL, FXDB	
Main Harness (Sheet 1 of 2).....	22
Main Harness (Sheet 2 of 2).....	23
Instruments and Indicators	24
Lights (Sheet 1 of 2)	25C
Lights (Sheet 2 of 2)	26C
Horn and Instruments.....	27C
Charging	28C
Starting	29C
Ignition	30C
Security (Sheet 1 of 2).....	31C
Security (Sheet 2 of 2).....	32C
FXDWG, FXDC	
Main Harness (Sheet 1 of 2).....	33
Main Harness (Sheet 2 of 2).....	34
Lights and Indicators	35
Lights (Sheet 1 of 2)	36C
Lights (Sheet 2 of 2)	37C
Horn and Instruments.....	38C
Charging	39C
Starting	40C
Ignition	41C
Security (Sheet 1 of 2).....	42C
Security Circuit (Sheet 2 of 2).....	43C

2007 Domestic and International Models	Page Number
FLHX, FLHT, FLHTC, FLHTCU, FLTR	
Main Harness (Sheet 1 of 2)	44
Main Harness (Sheet 2 of 2)	45
Interconnect Harness.....	46C
Tail lamp, Auxiliary Lamps, Fender Tip Lamps, Directional Lamps and Tour-Pak Lights	47C
Starting and Charging	48C
Handlebar Switches, Indicator Lamps, Fairing Cap/Instrument Nacelle Switches and HFSSM/Antenna	49C
Radio, CB/Intercom, Rear Speakers, XM, Hands Free Phone and Navigation.....	50C
FLHR, FLHRC, FLHRS	
Main Harness (Sheet 1 of 2)	51
Main Harness (Sheet 2 of 2)	52
Starting and Charging	53C
Handlebar Switches, Speedometer, Indicator Lamps, Tail Lamp, Auxiliary Lamps, Directional Lamps, Fender Tip Lamps and Auxiliary Lamp/Accessory Switches	54C

TABLE OF CONTENTS IS CONTINUED ON INSIDE BACK COVER

HOW-TO-USE THESE WIRING DIAGRAMS

Page numbering

The wiring diagrams identified with page numbers “1”, “2”, etc. are overall diagrams that include all electrical/electronic systems and their associated wiring and connectors. Circuit specific diagrams for the Starting, Charging, Ignition, Horn and Instruments, Lighting, Cruise Control System, Security, Police and Audio System have been added. The circuit specific diagrams only show the components and wiring in the System(s) listed in the page title. The pages containing circuit specific diagrams are numbered “3C”, “4C”, etc. The “C” indicates circuit specific.

Troubleshooting

Once a problem has been isolated to a specific system or circuit, the circuit specific diagrams will simplify locating the problem.

NOTE

Harness Part No.'s may be included on some wiring diagrams. Use these numbers for reference purposes only. ALWAYS REFER TO THE PARTS CATALOG WHEN ORDERING WIRING HARNESSSES.

2007 WIRING DIAGRAMS - TABLE OF CONTENTS (Continued)

2007 Domestic and International Models

Page Number

TLE Sidecar, TLE Ultra Sidecar

Amplifier, Sidecar Speakers and Switches 55C

FLHTP Police

Main Harness (Sheet 1 of 2).....56

Main Harness (Sheet 2 of 2).....57

Interconnect Harness 58C

Pursuit Lamps, Directional Lamps, Tail Lamp and Fender Tip Lamps..... 59C

Starting and Charging..... 60C

Handlebar Switches, Indicator Lamps, Fairing Cap Switches and HFMS Antenna..... 61C

Siren Amplifier and Strobe Harness 62C

Anti-Lock Brake System 63C

FLHP and FLHPE Police

Main Harness (Sheet 1 of 2).....64

Main Harness (Sheet 2 of 2).....65

Starting and Charging..... 66C

Handlebar Switches, Indicator Lamps, Tail Lamp, Pursuit Lamps, Directional Lamps, Accessory/Spot Switch, Speedometer and Tachometer 67C

Anti-Lock Brake System 68C

Optional Strobe System..... 69C

2007 Domestic and International Models

Page Number

VRSCAW, VRSCD, VRSCDX, VRSCX

Main Harness (Sheet 1 of 2) 70

VRSCR

Main Harness (Sheet 1 of 2) 71

VRSCAW, VRSCD, VRSCDX, VRSCX, VRSCR

Main Harness (Sheet 2 of 2) 72


Ignition..... 73C

Starting..... 74C


Lighting..... 75C


Horn and Instruments 76C


Security 77C

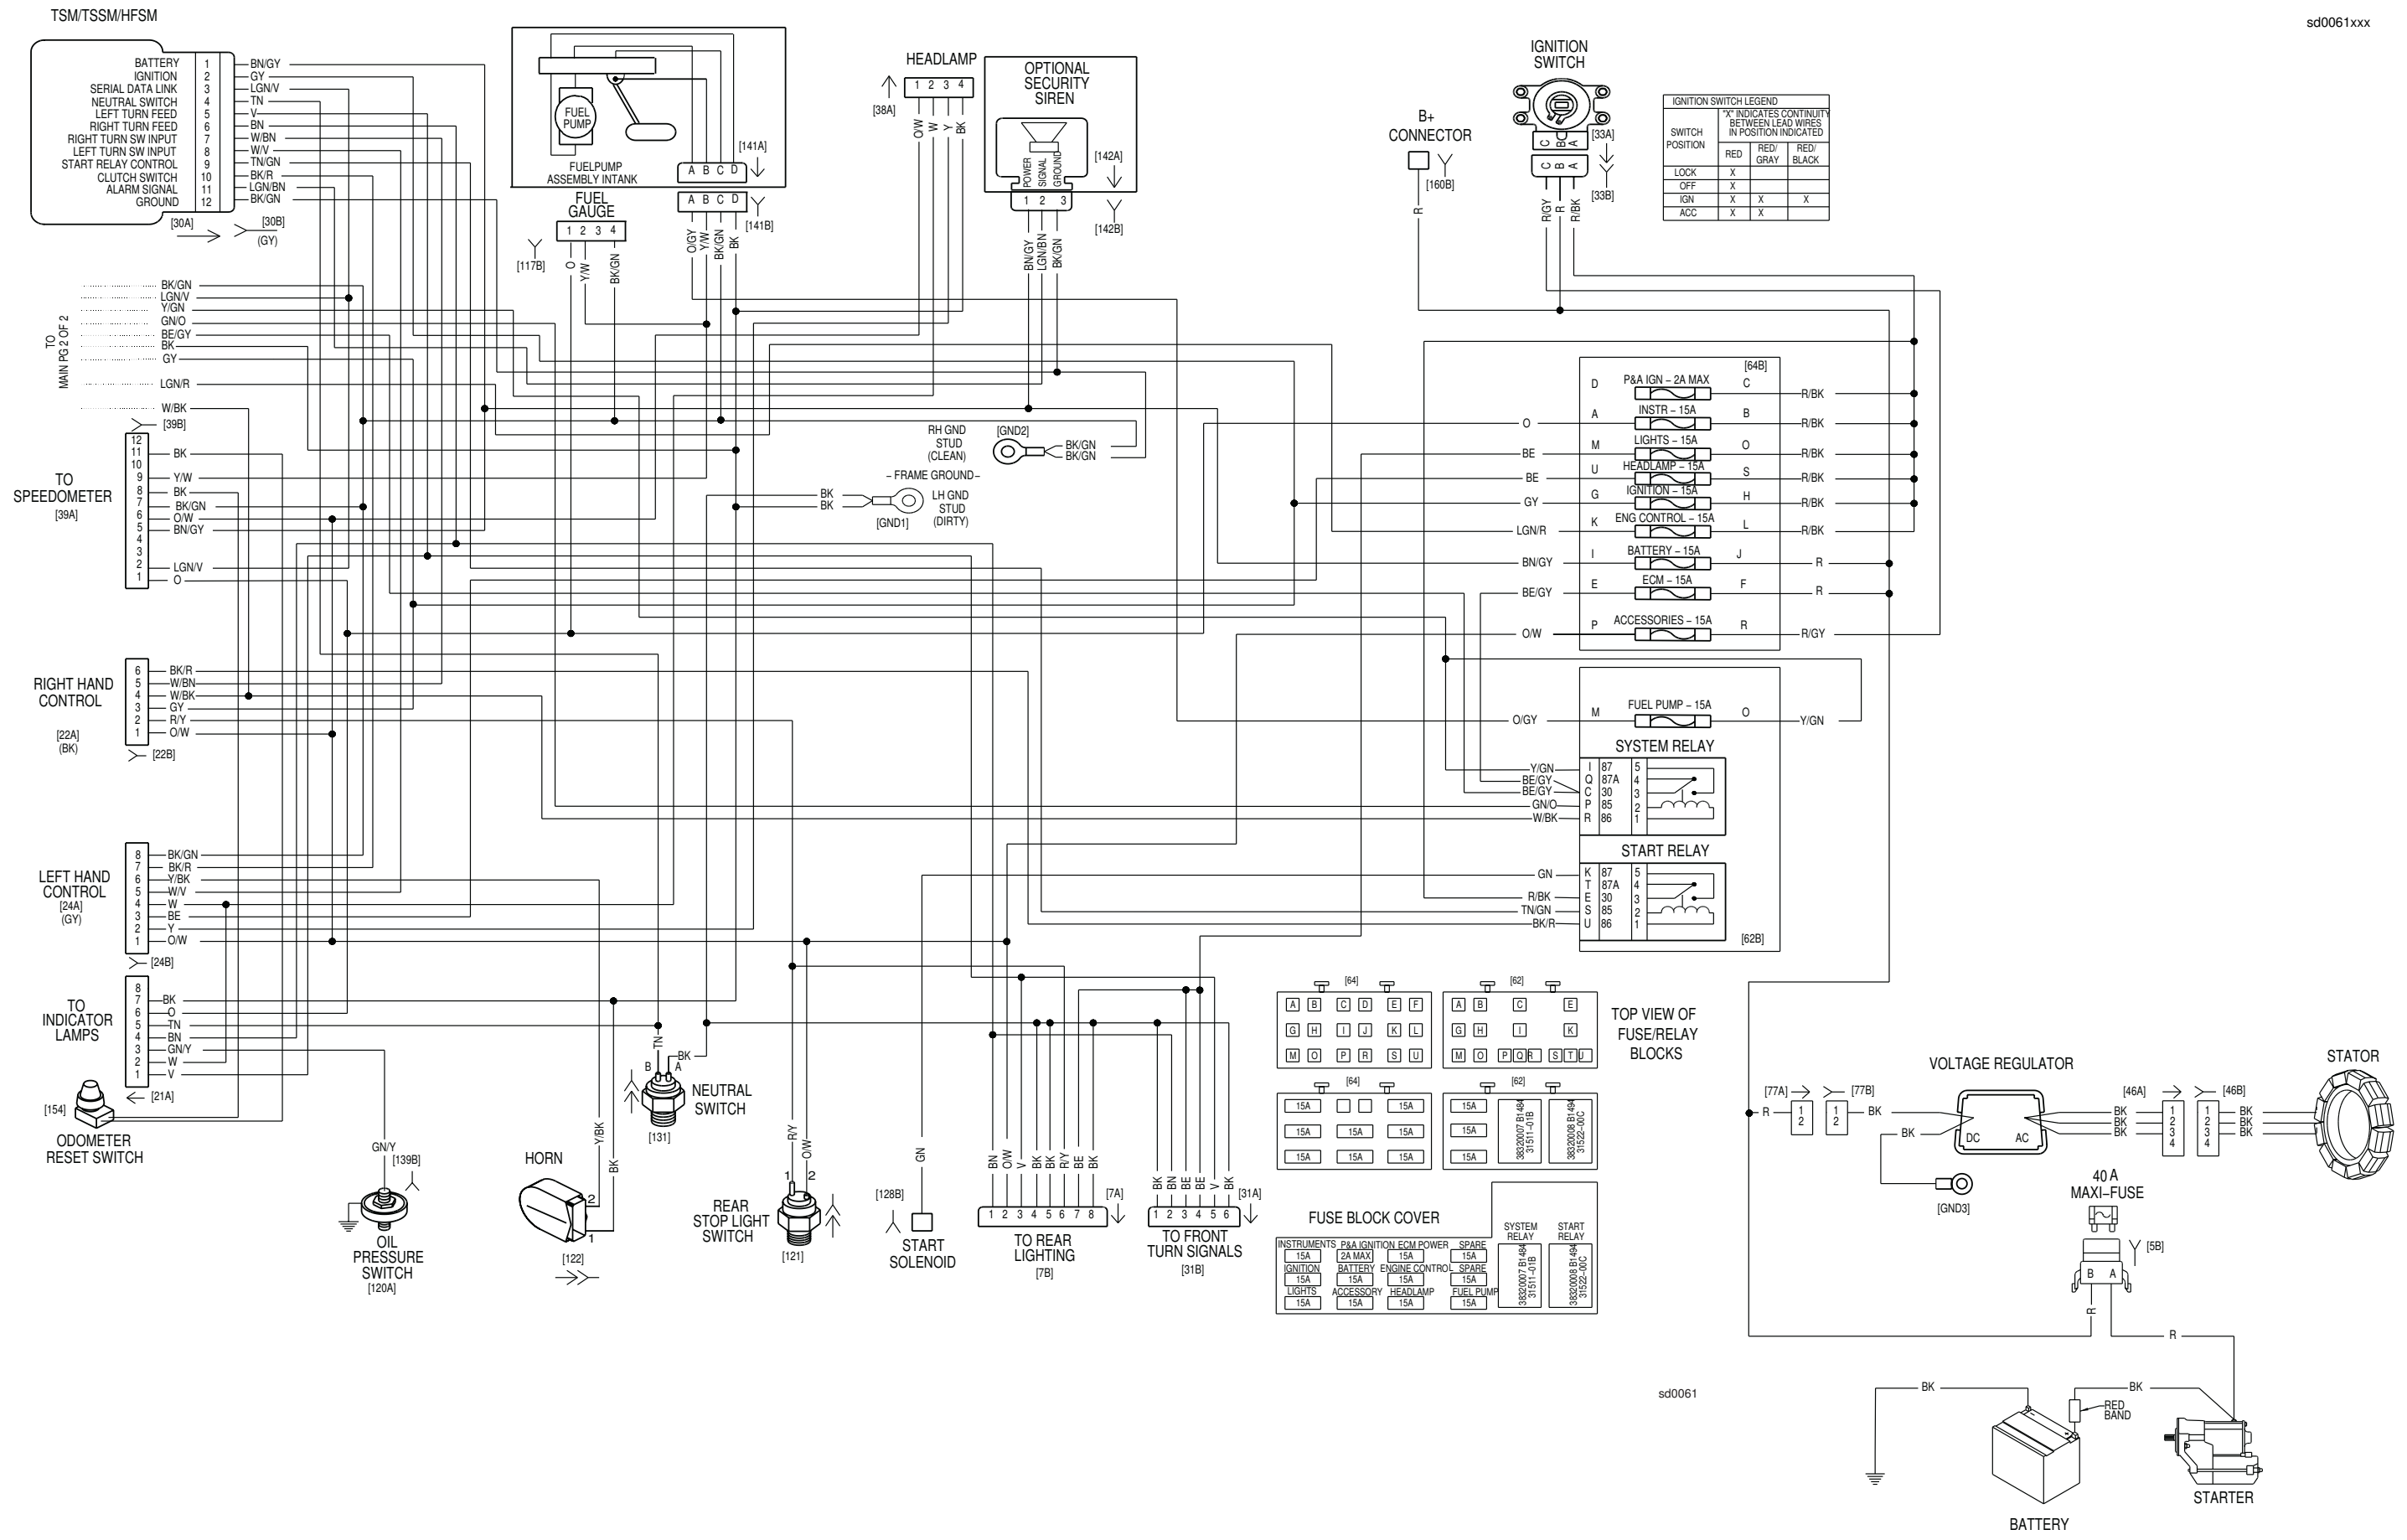


2007 ALL SOFTAIL DOM. and INT. MODELS, MAIN HARNESS (SHEET 1 OF 3)

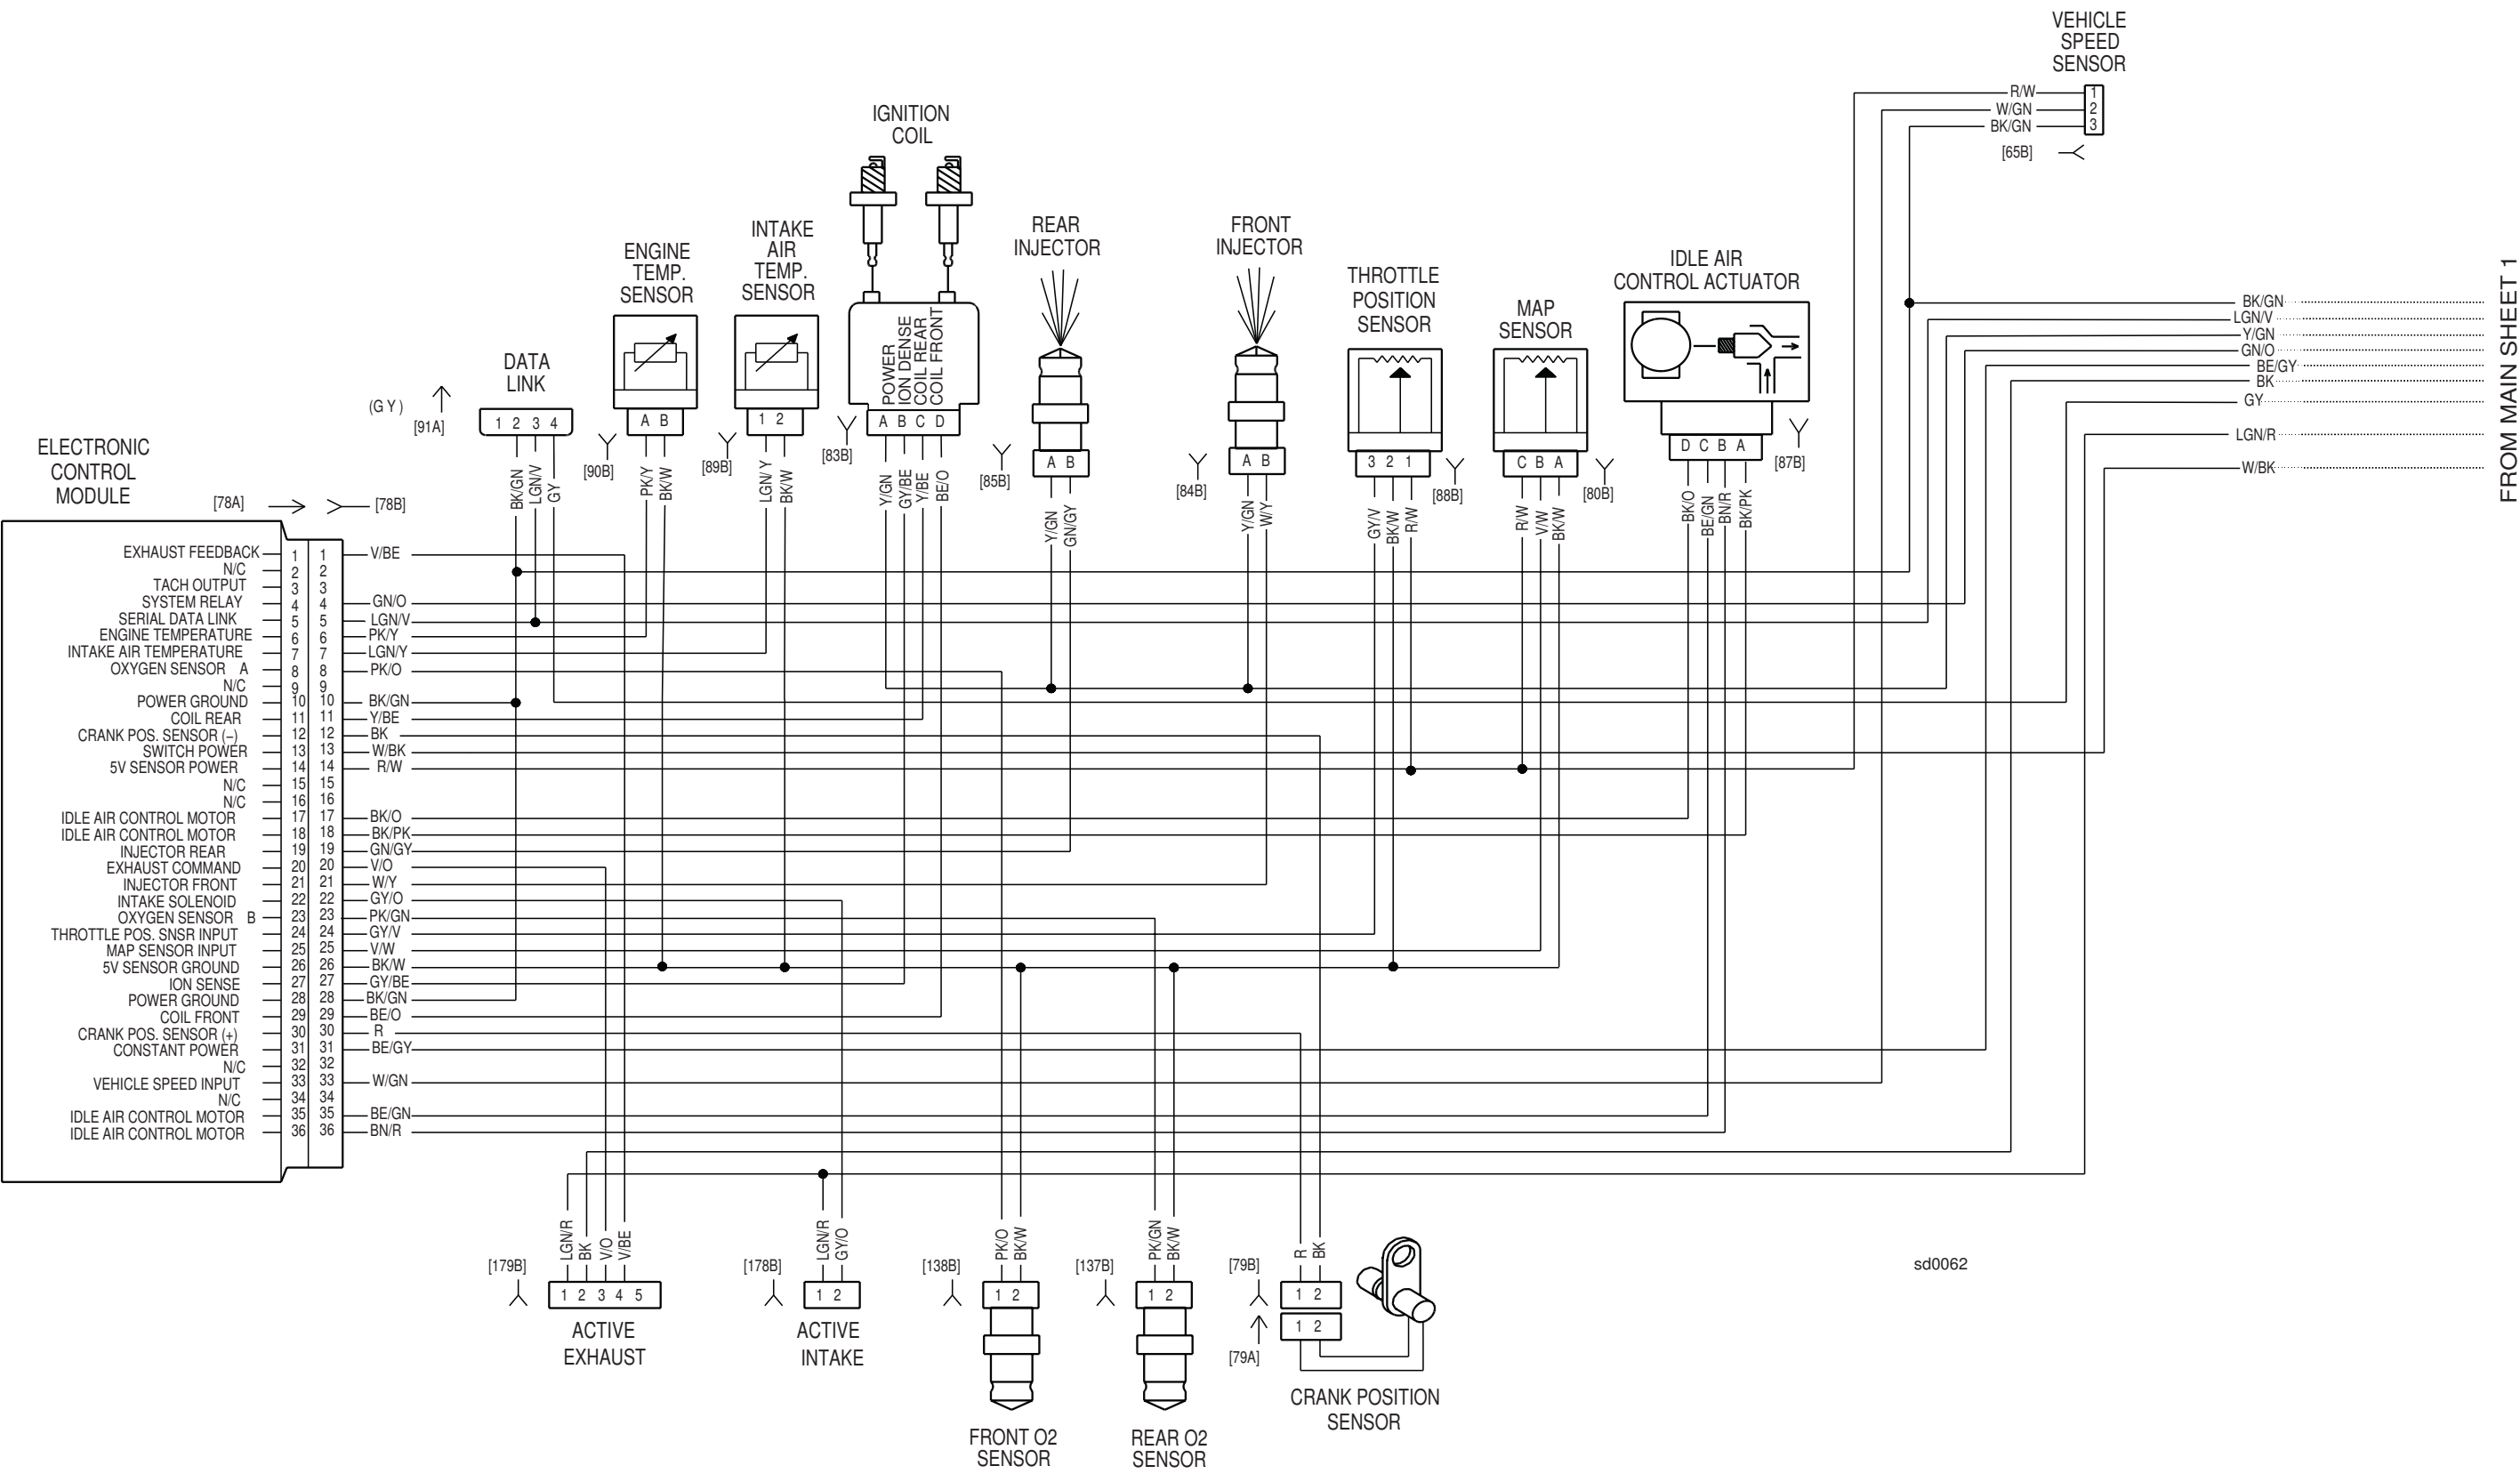


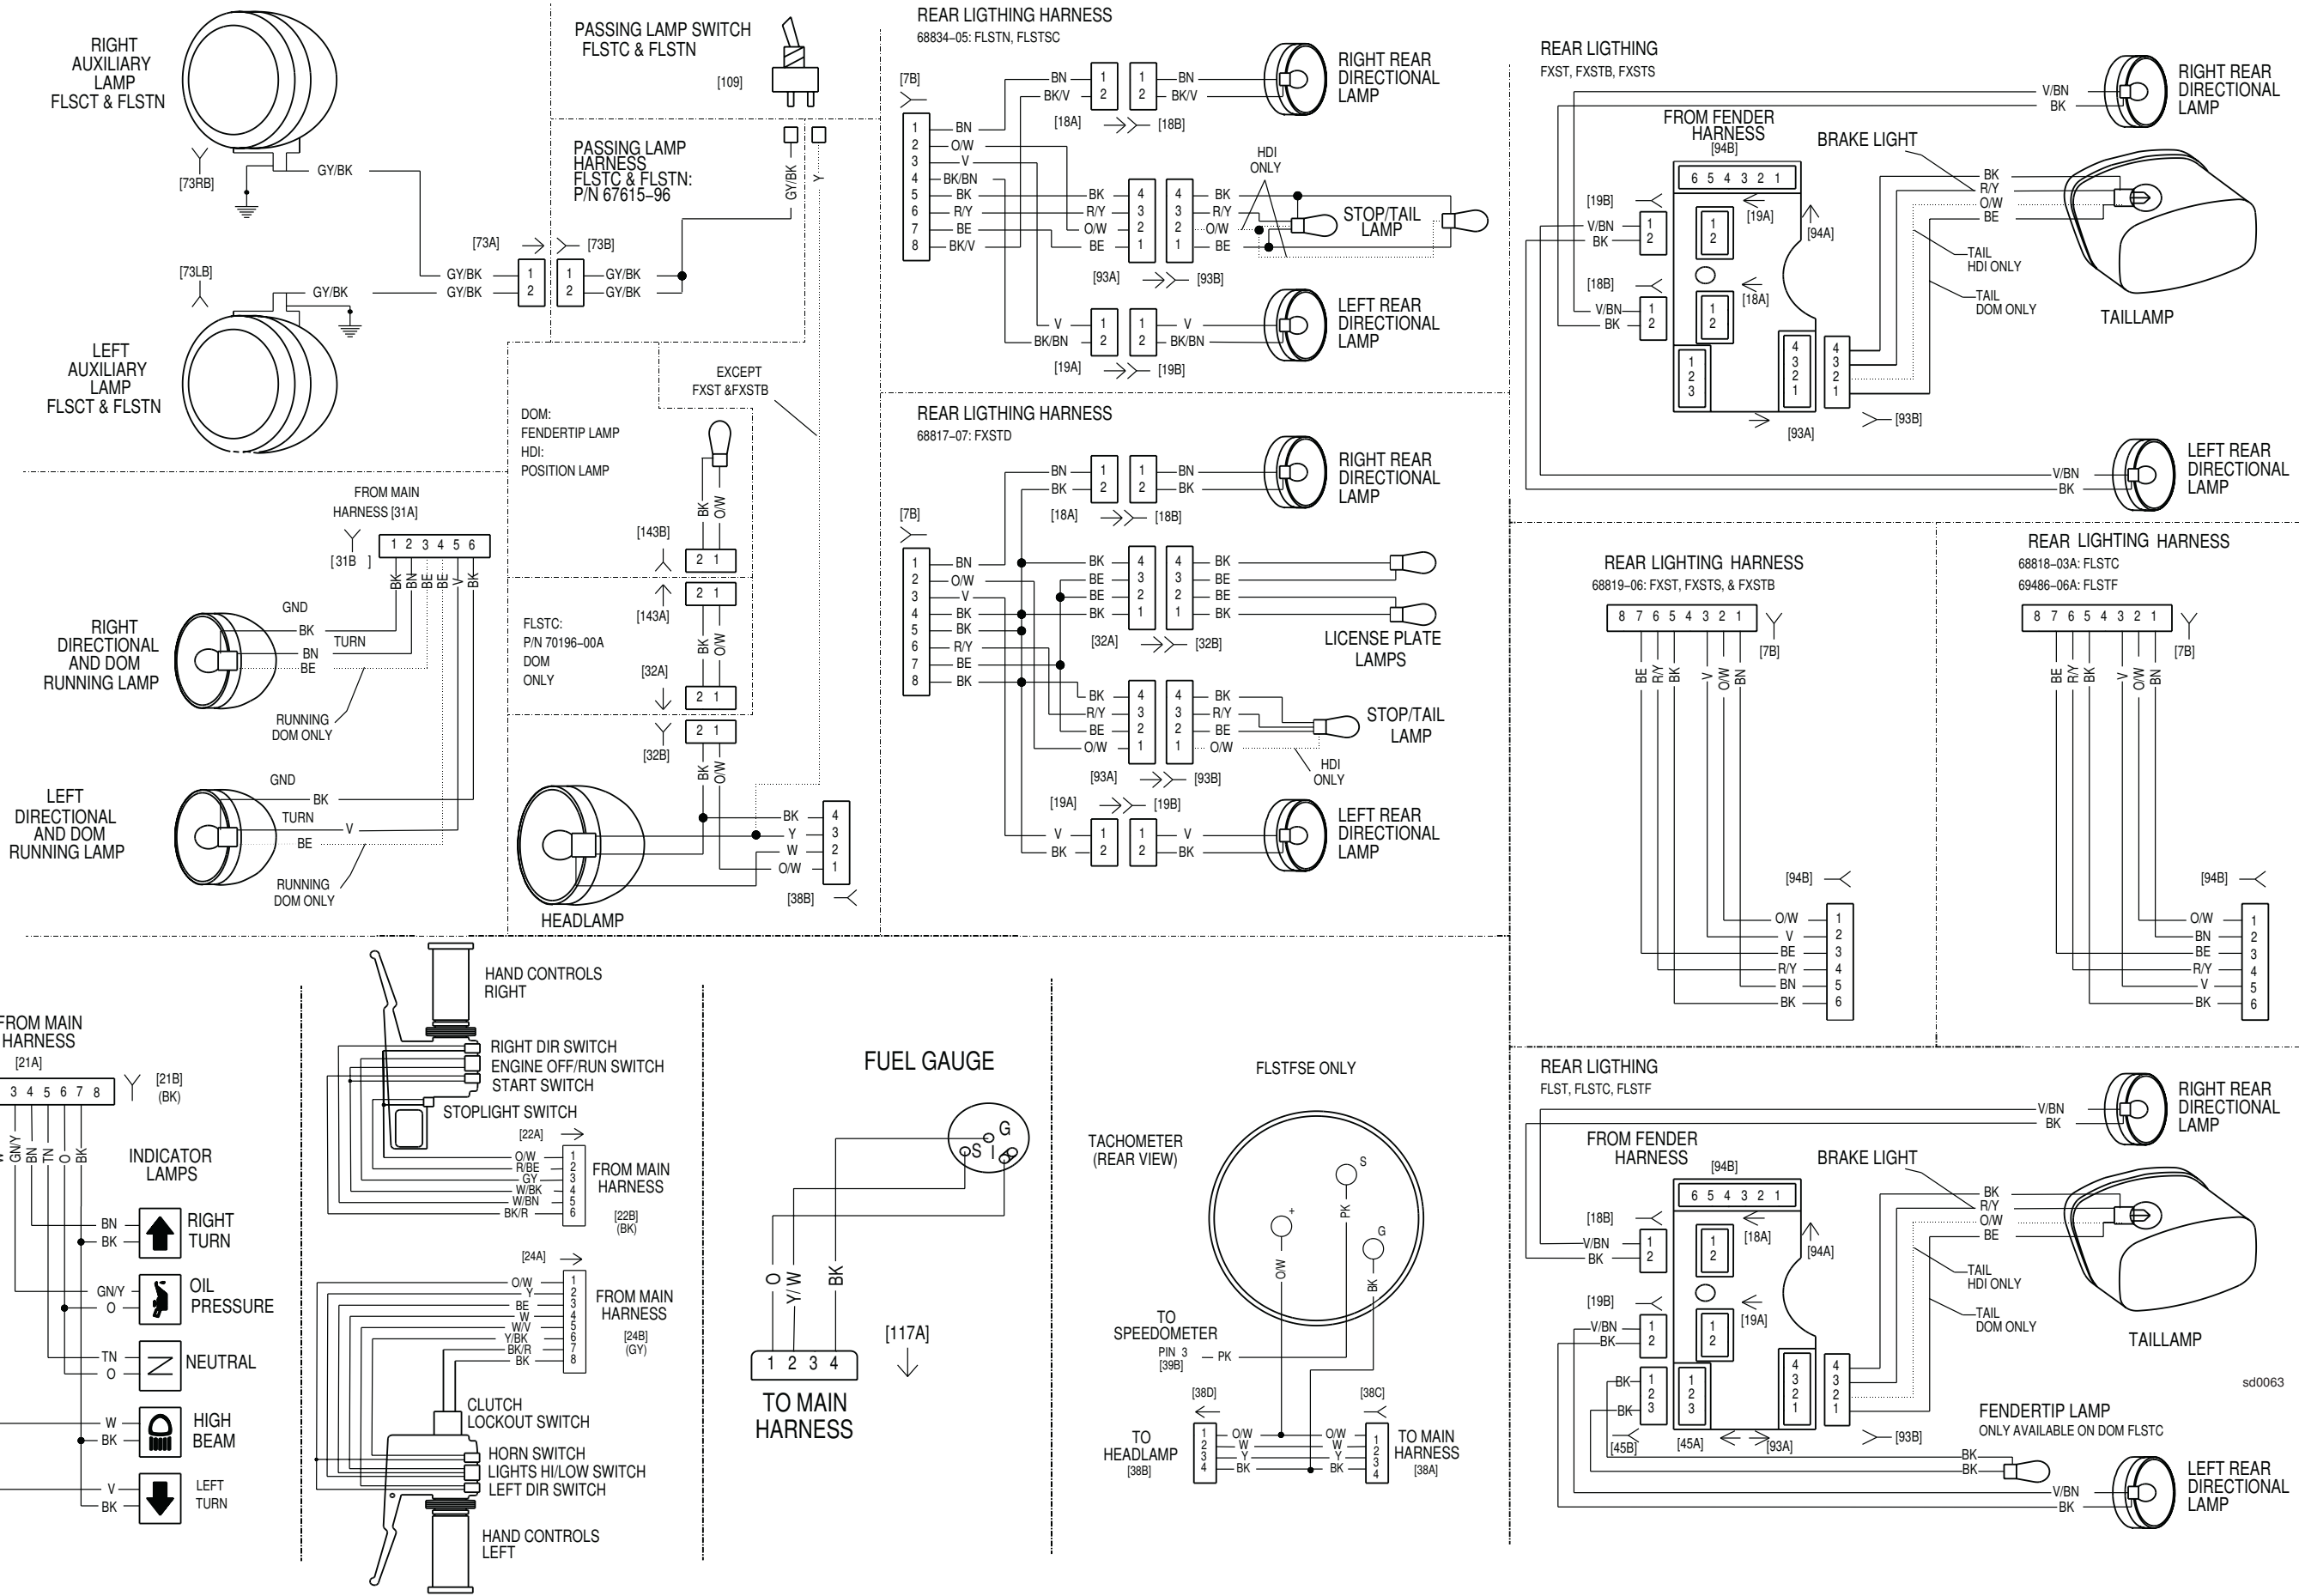

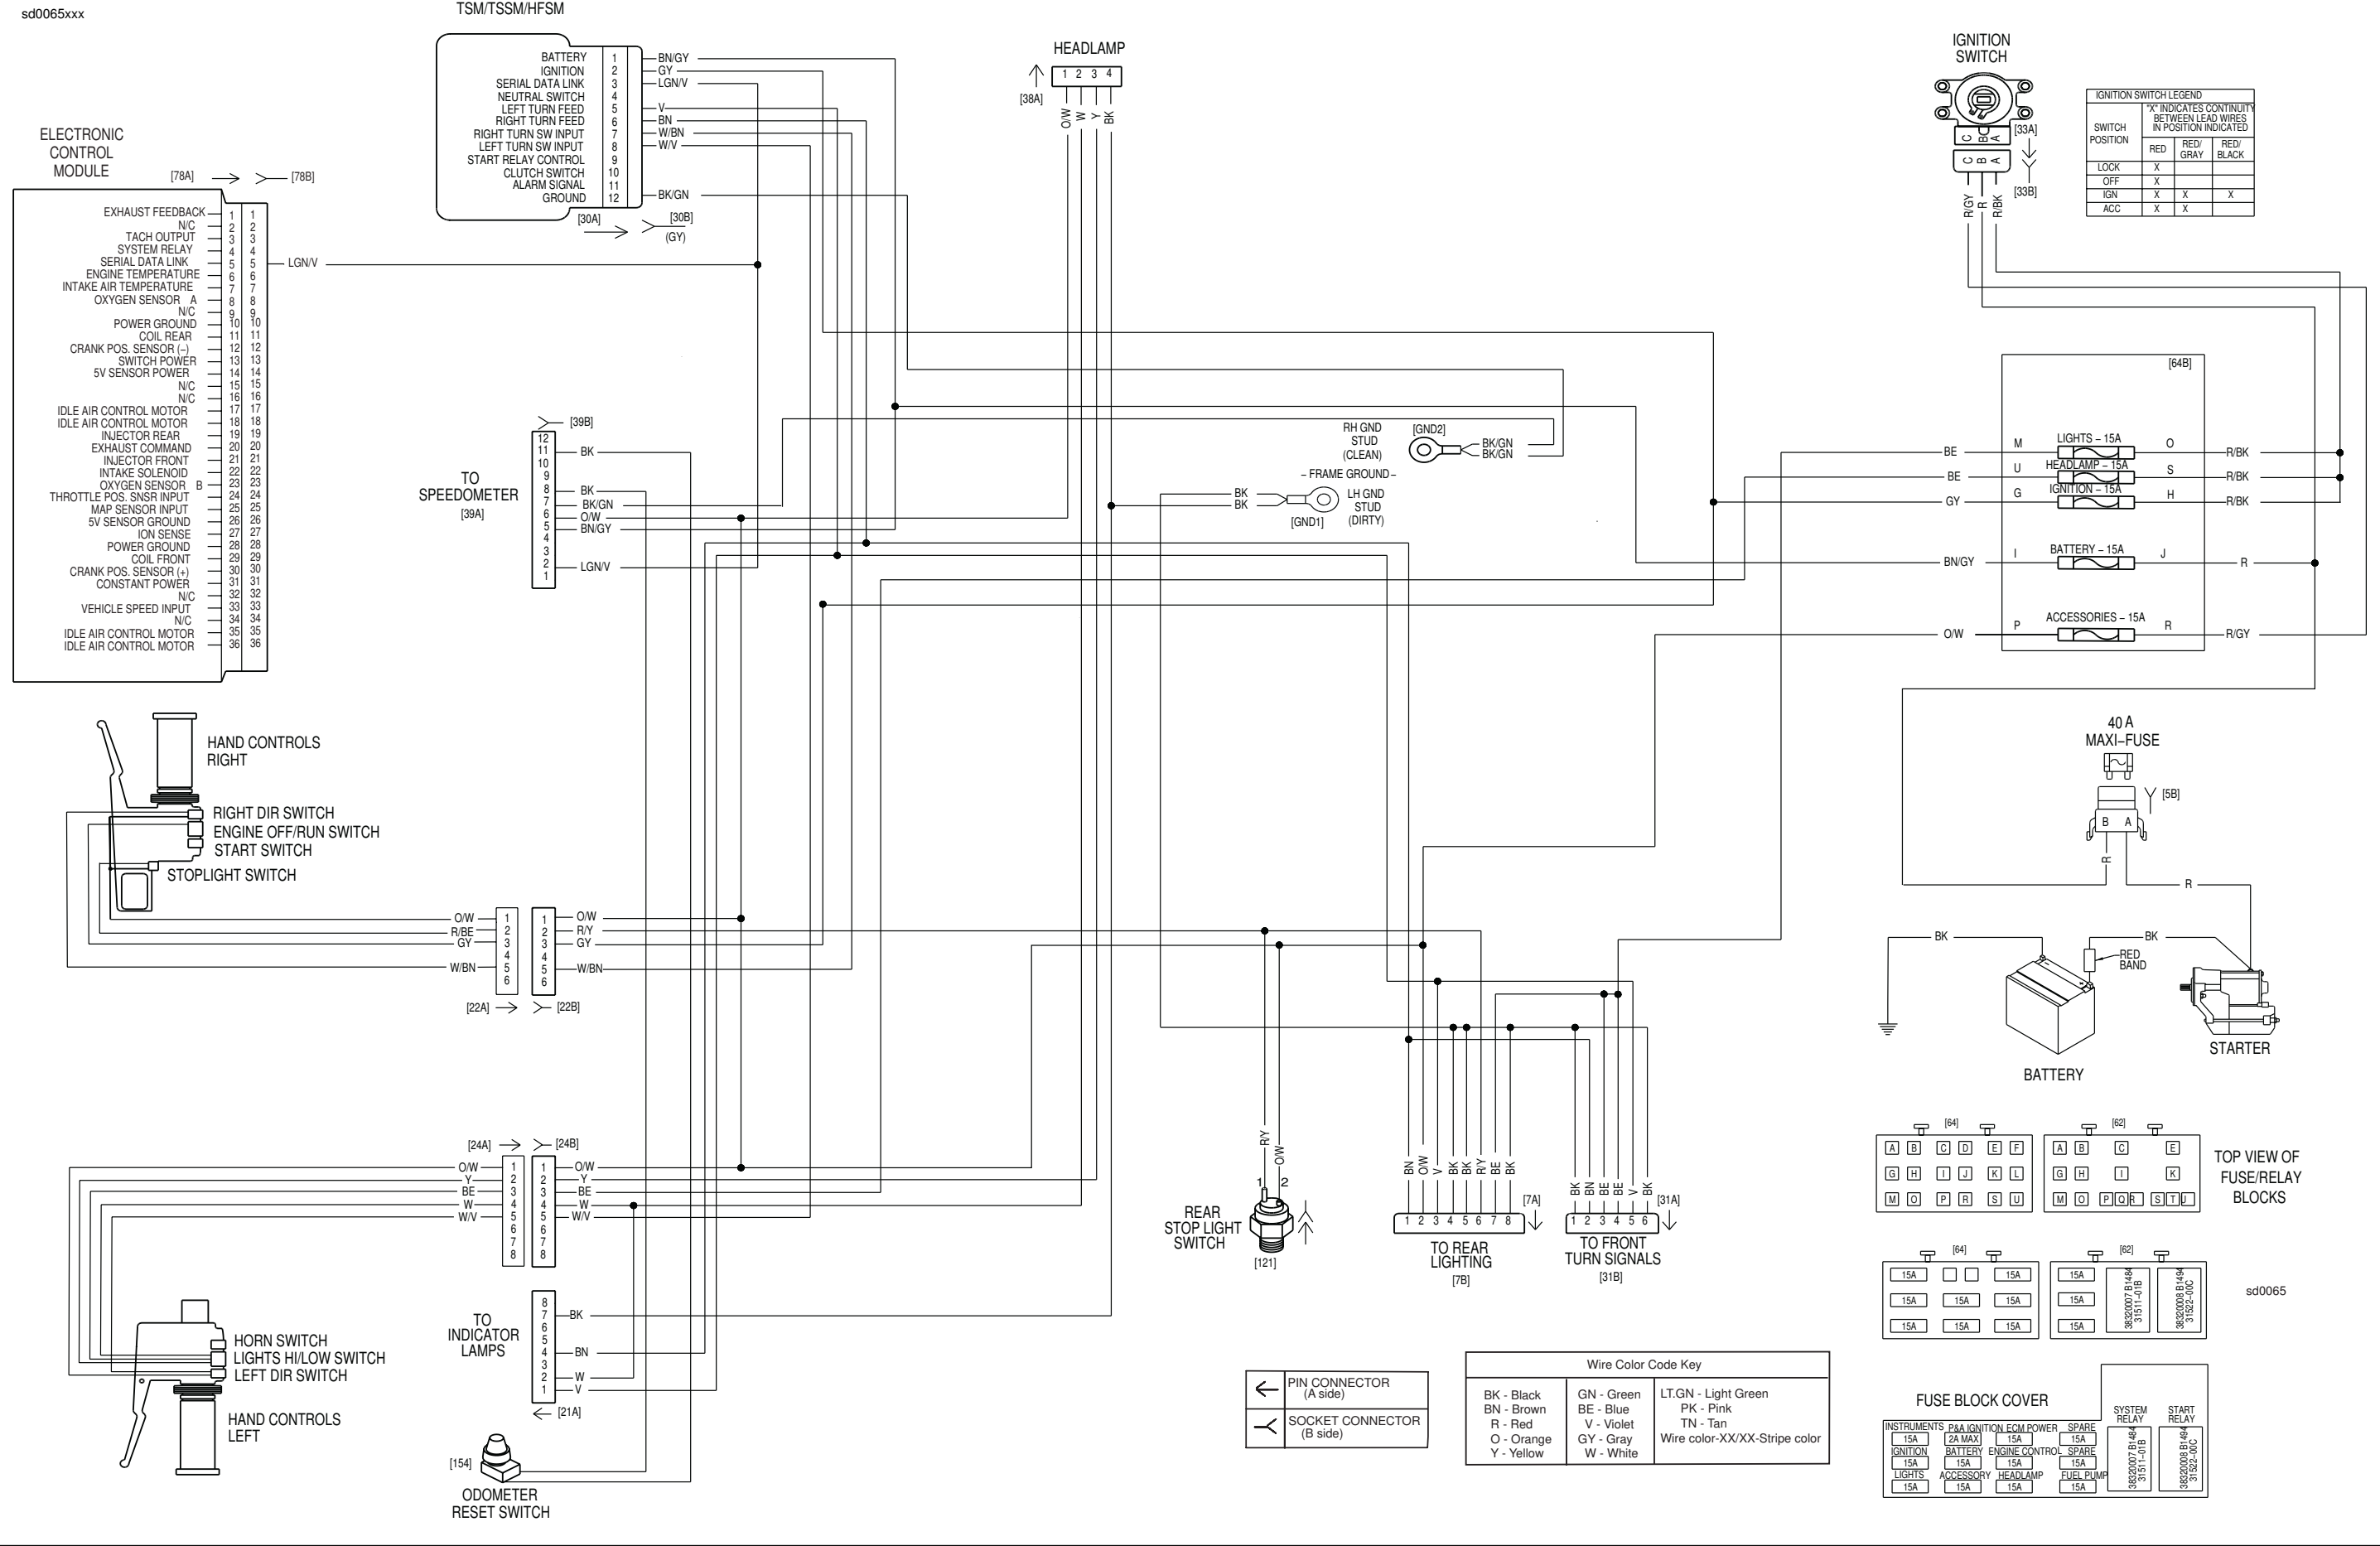

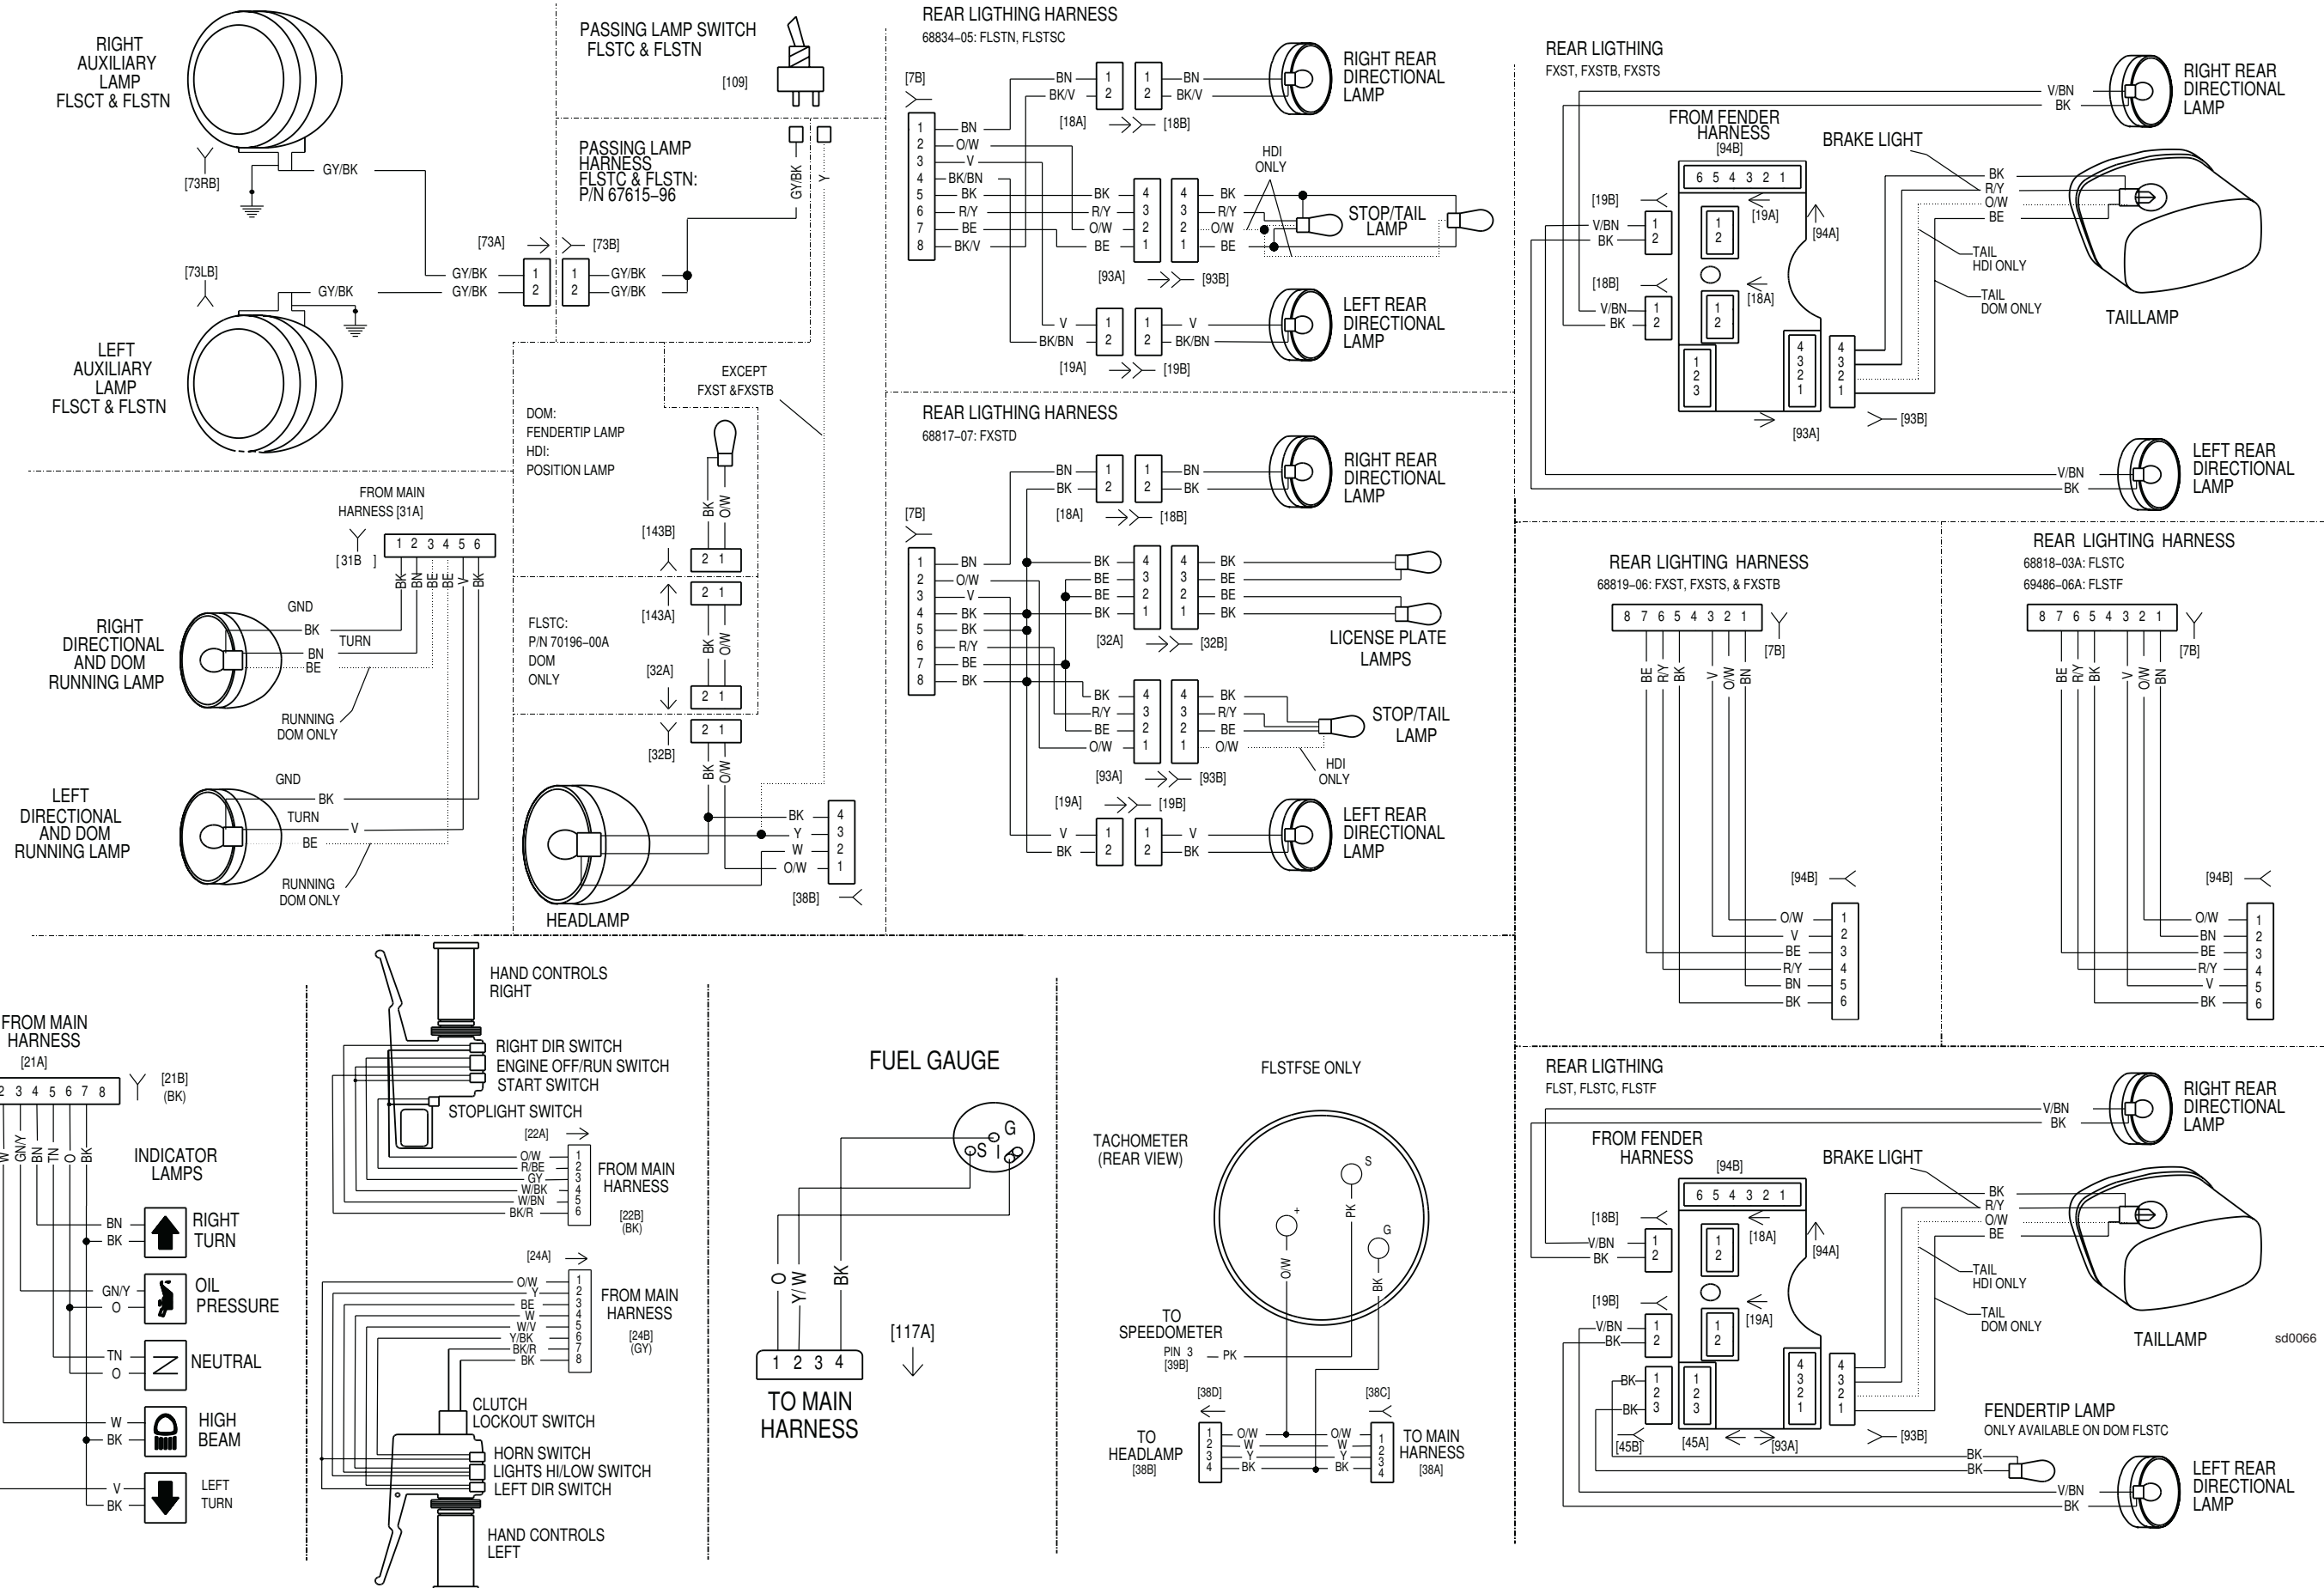




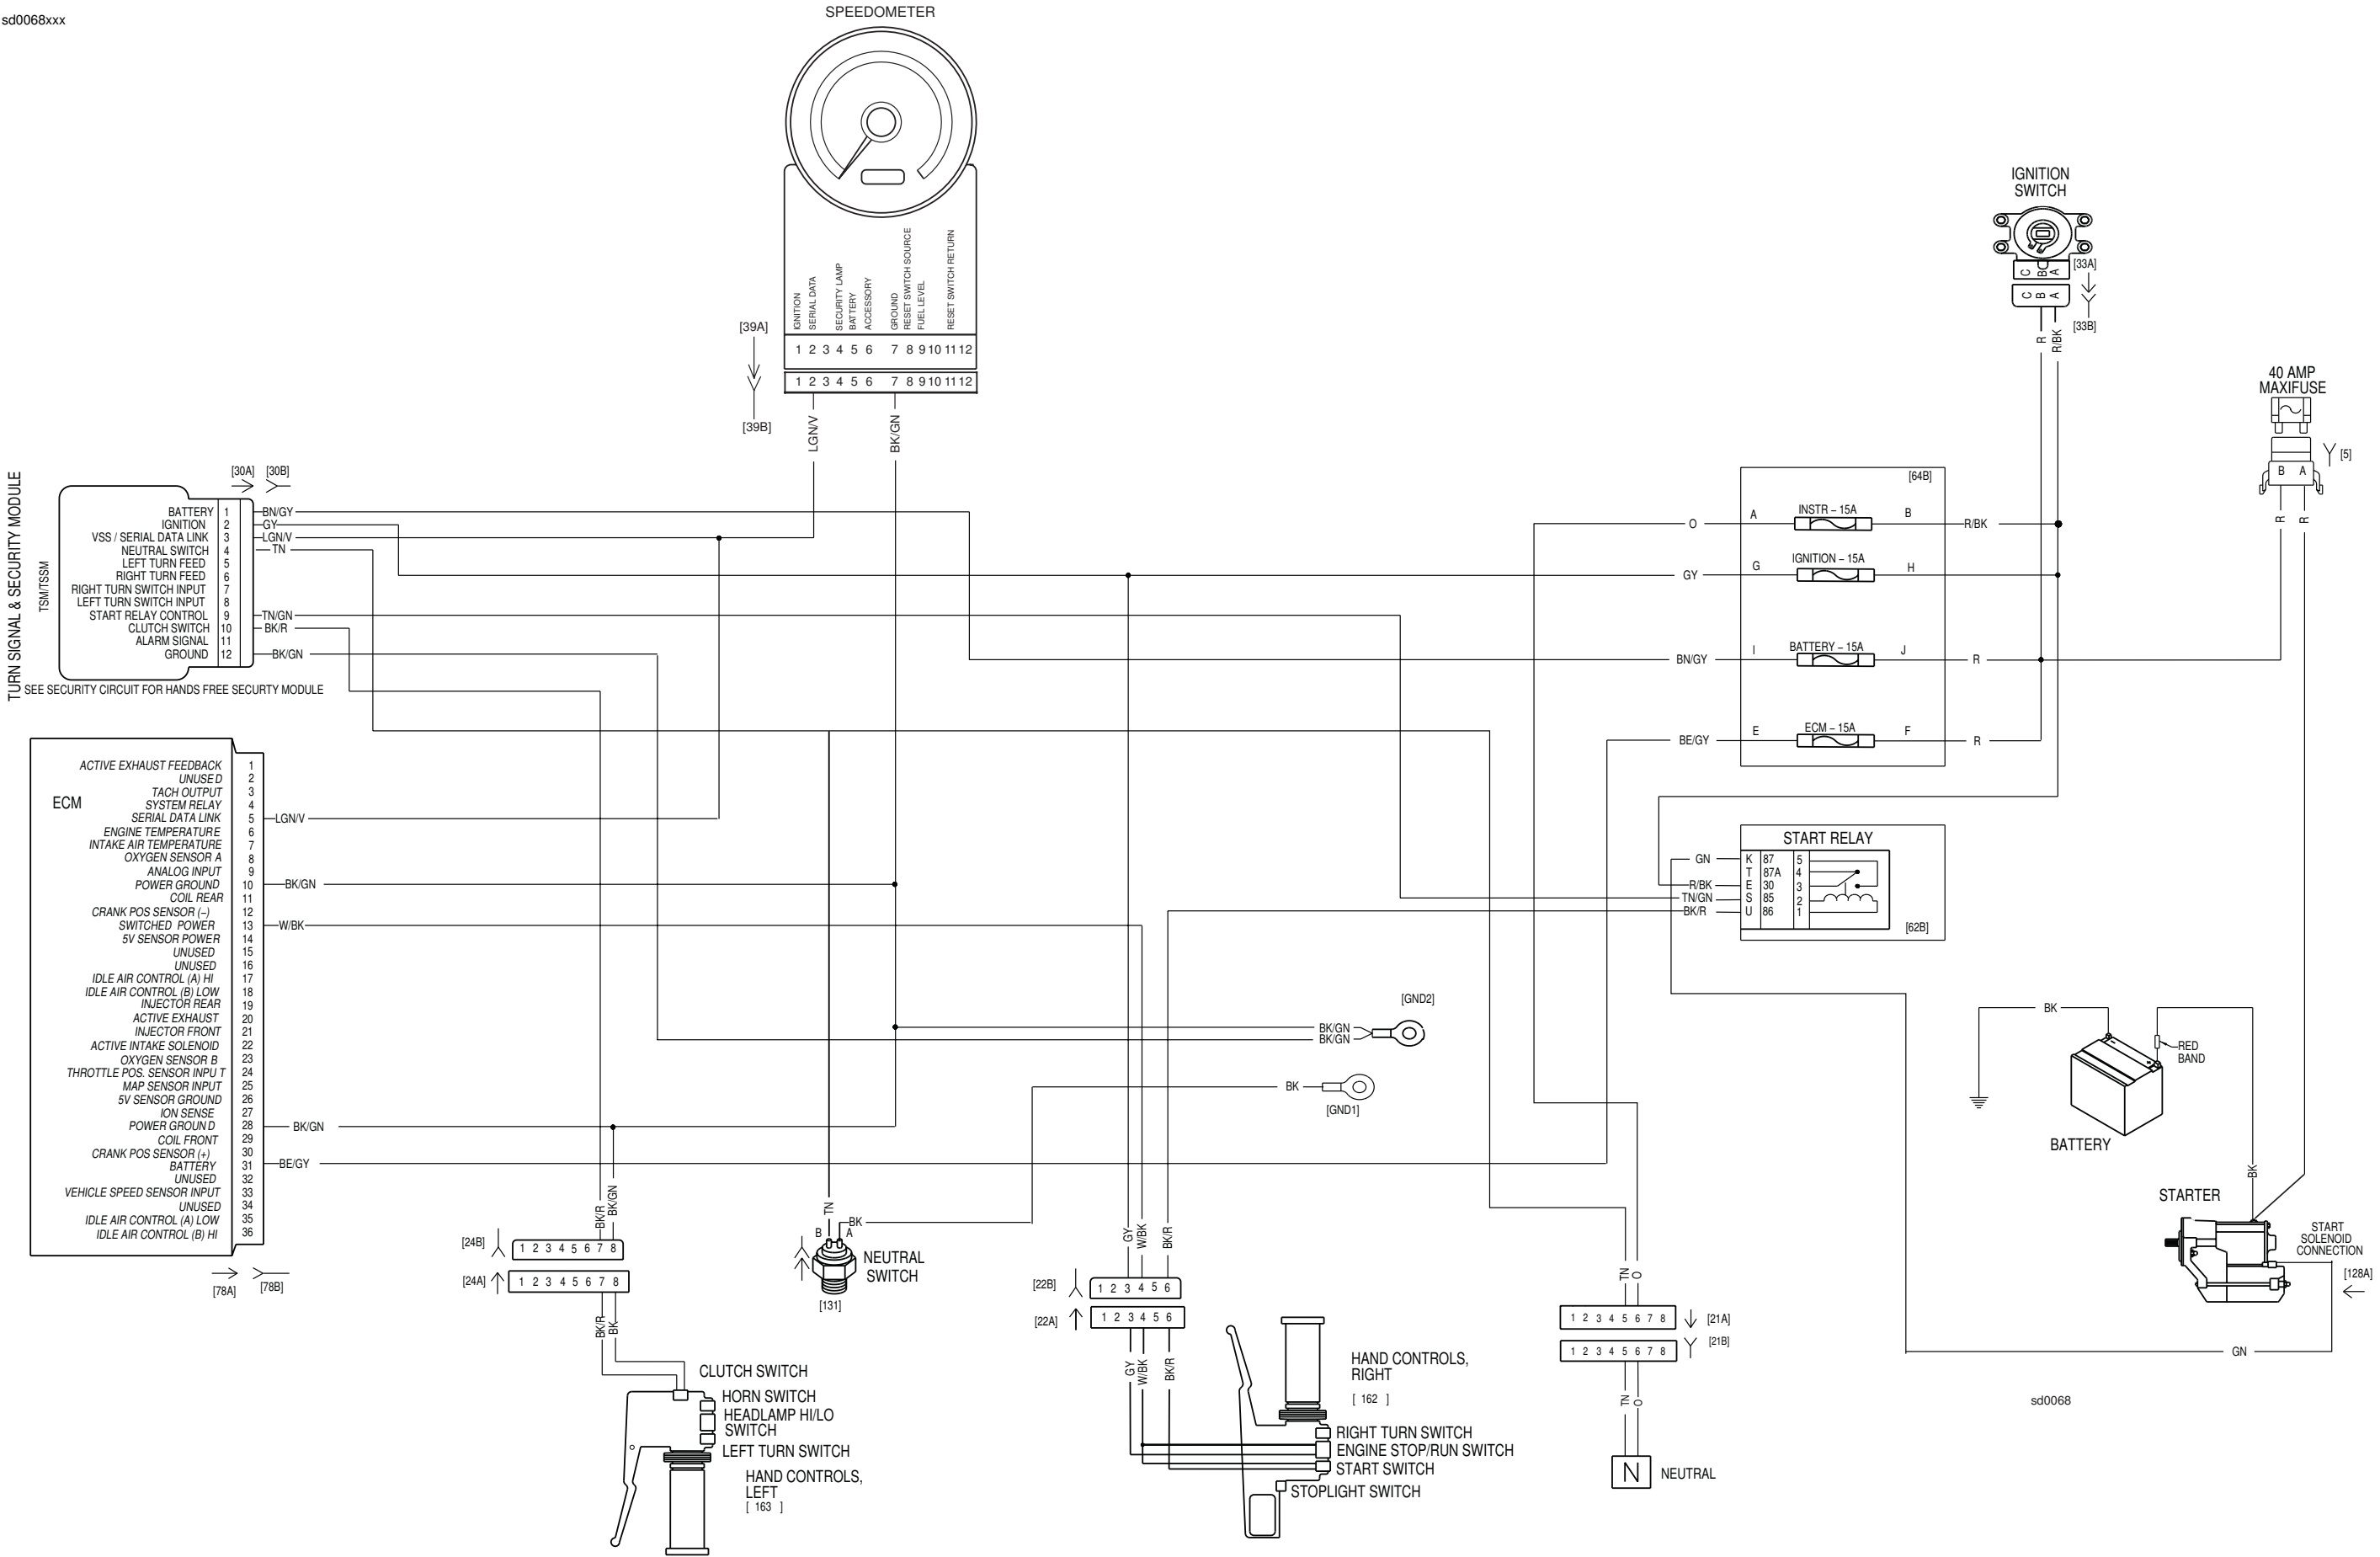


2007 ALL SOFTAIL DOM. and INT. MODELS, STARTING


SEE SHEET1
FOR FUTHER
CONNECTIONS

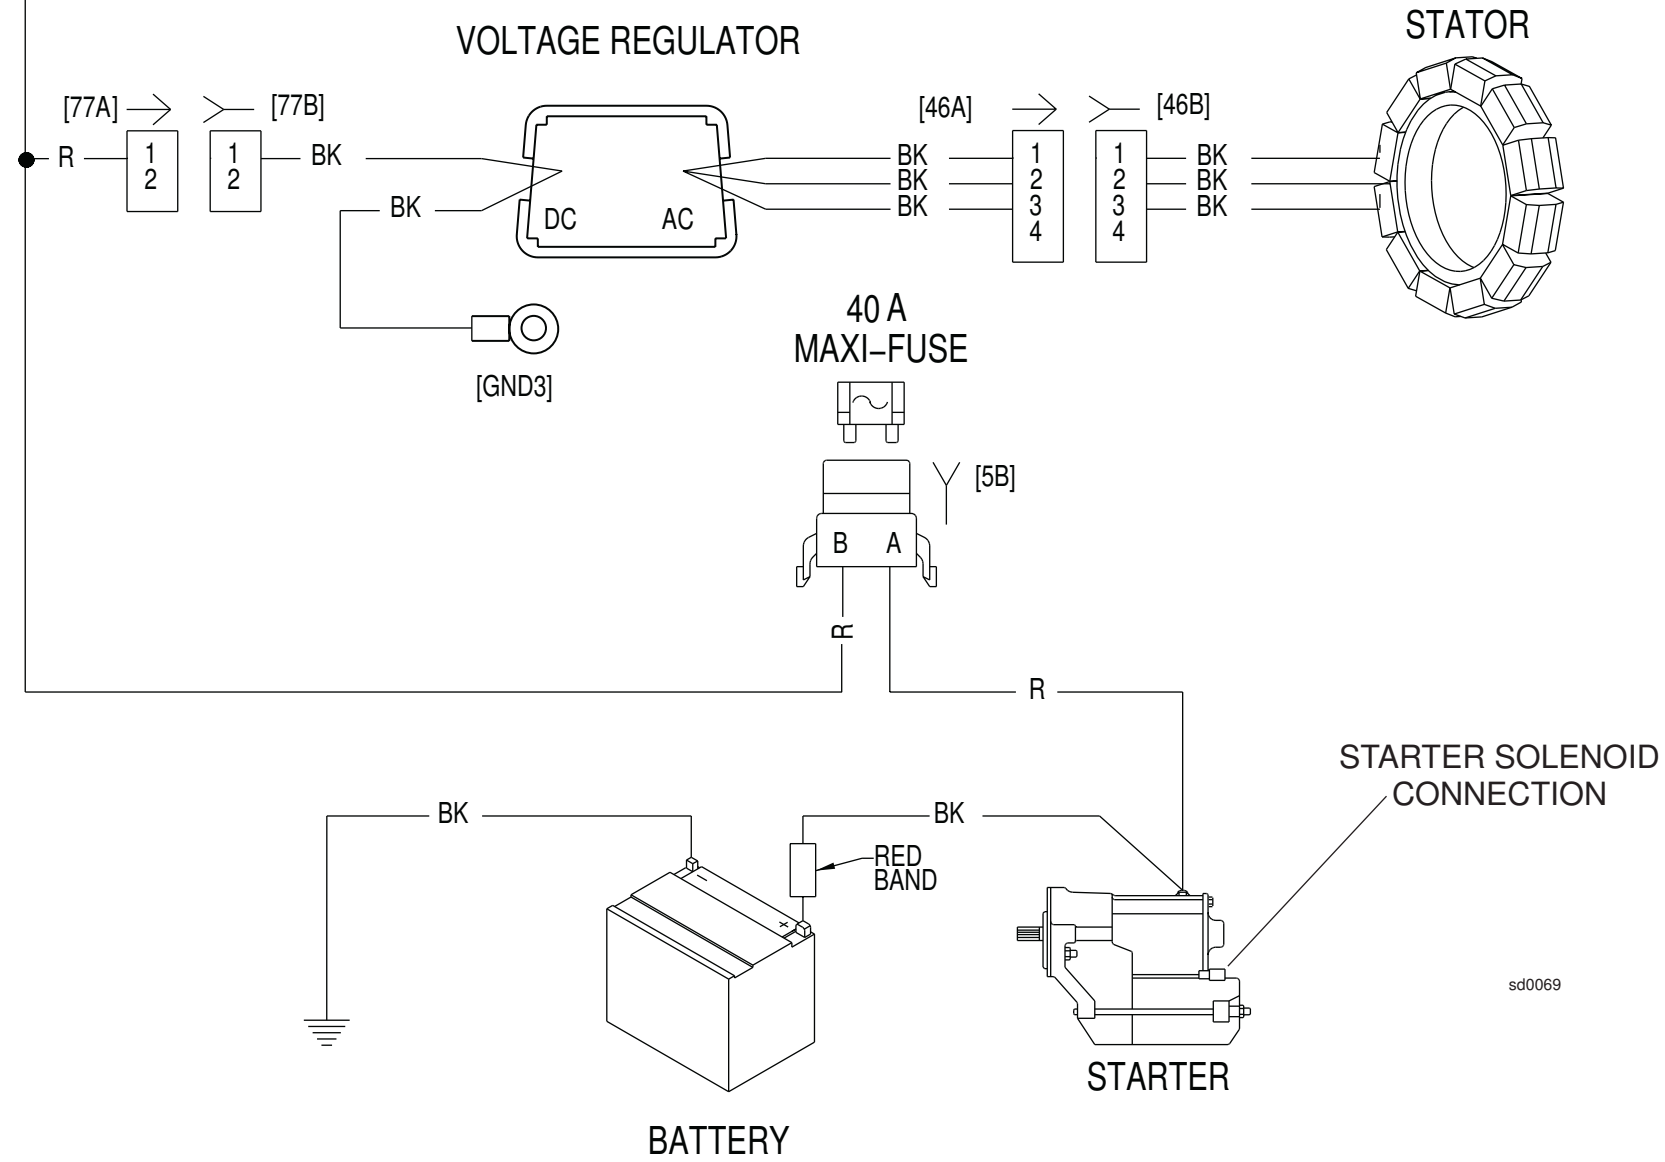


sd0069

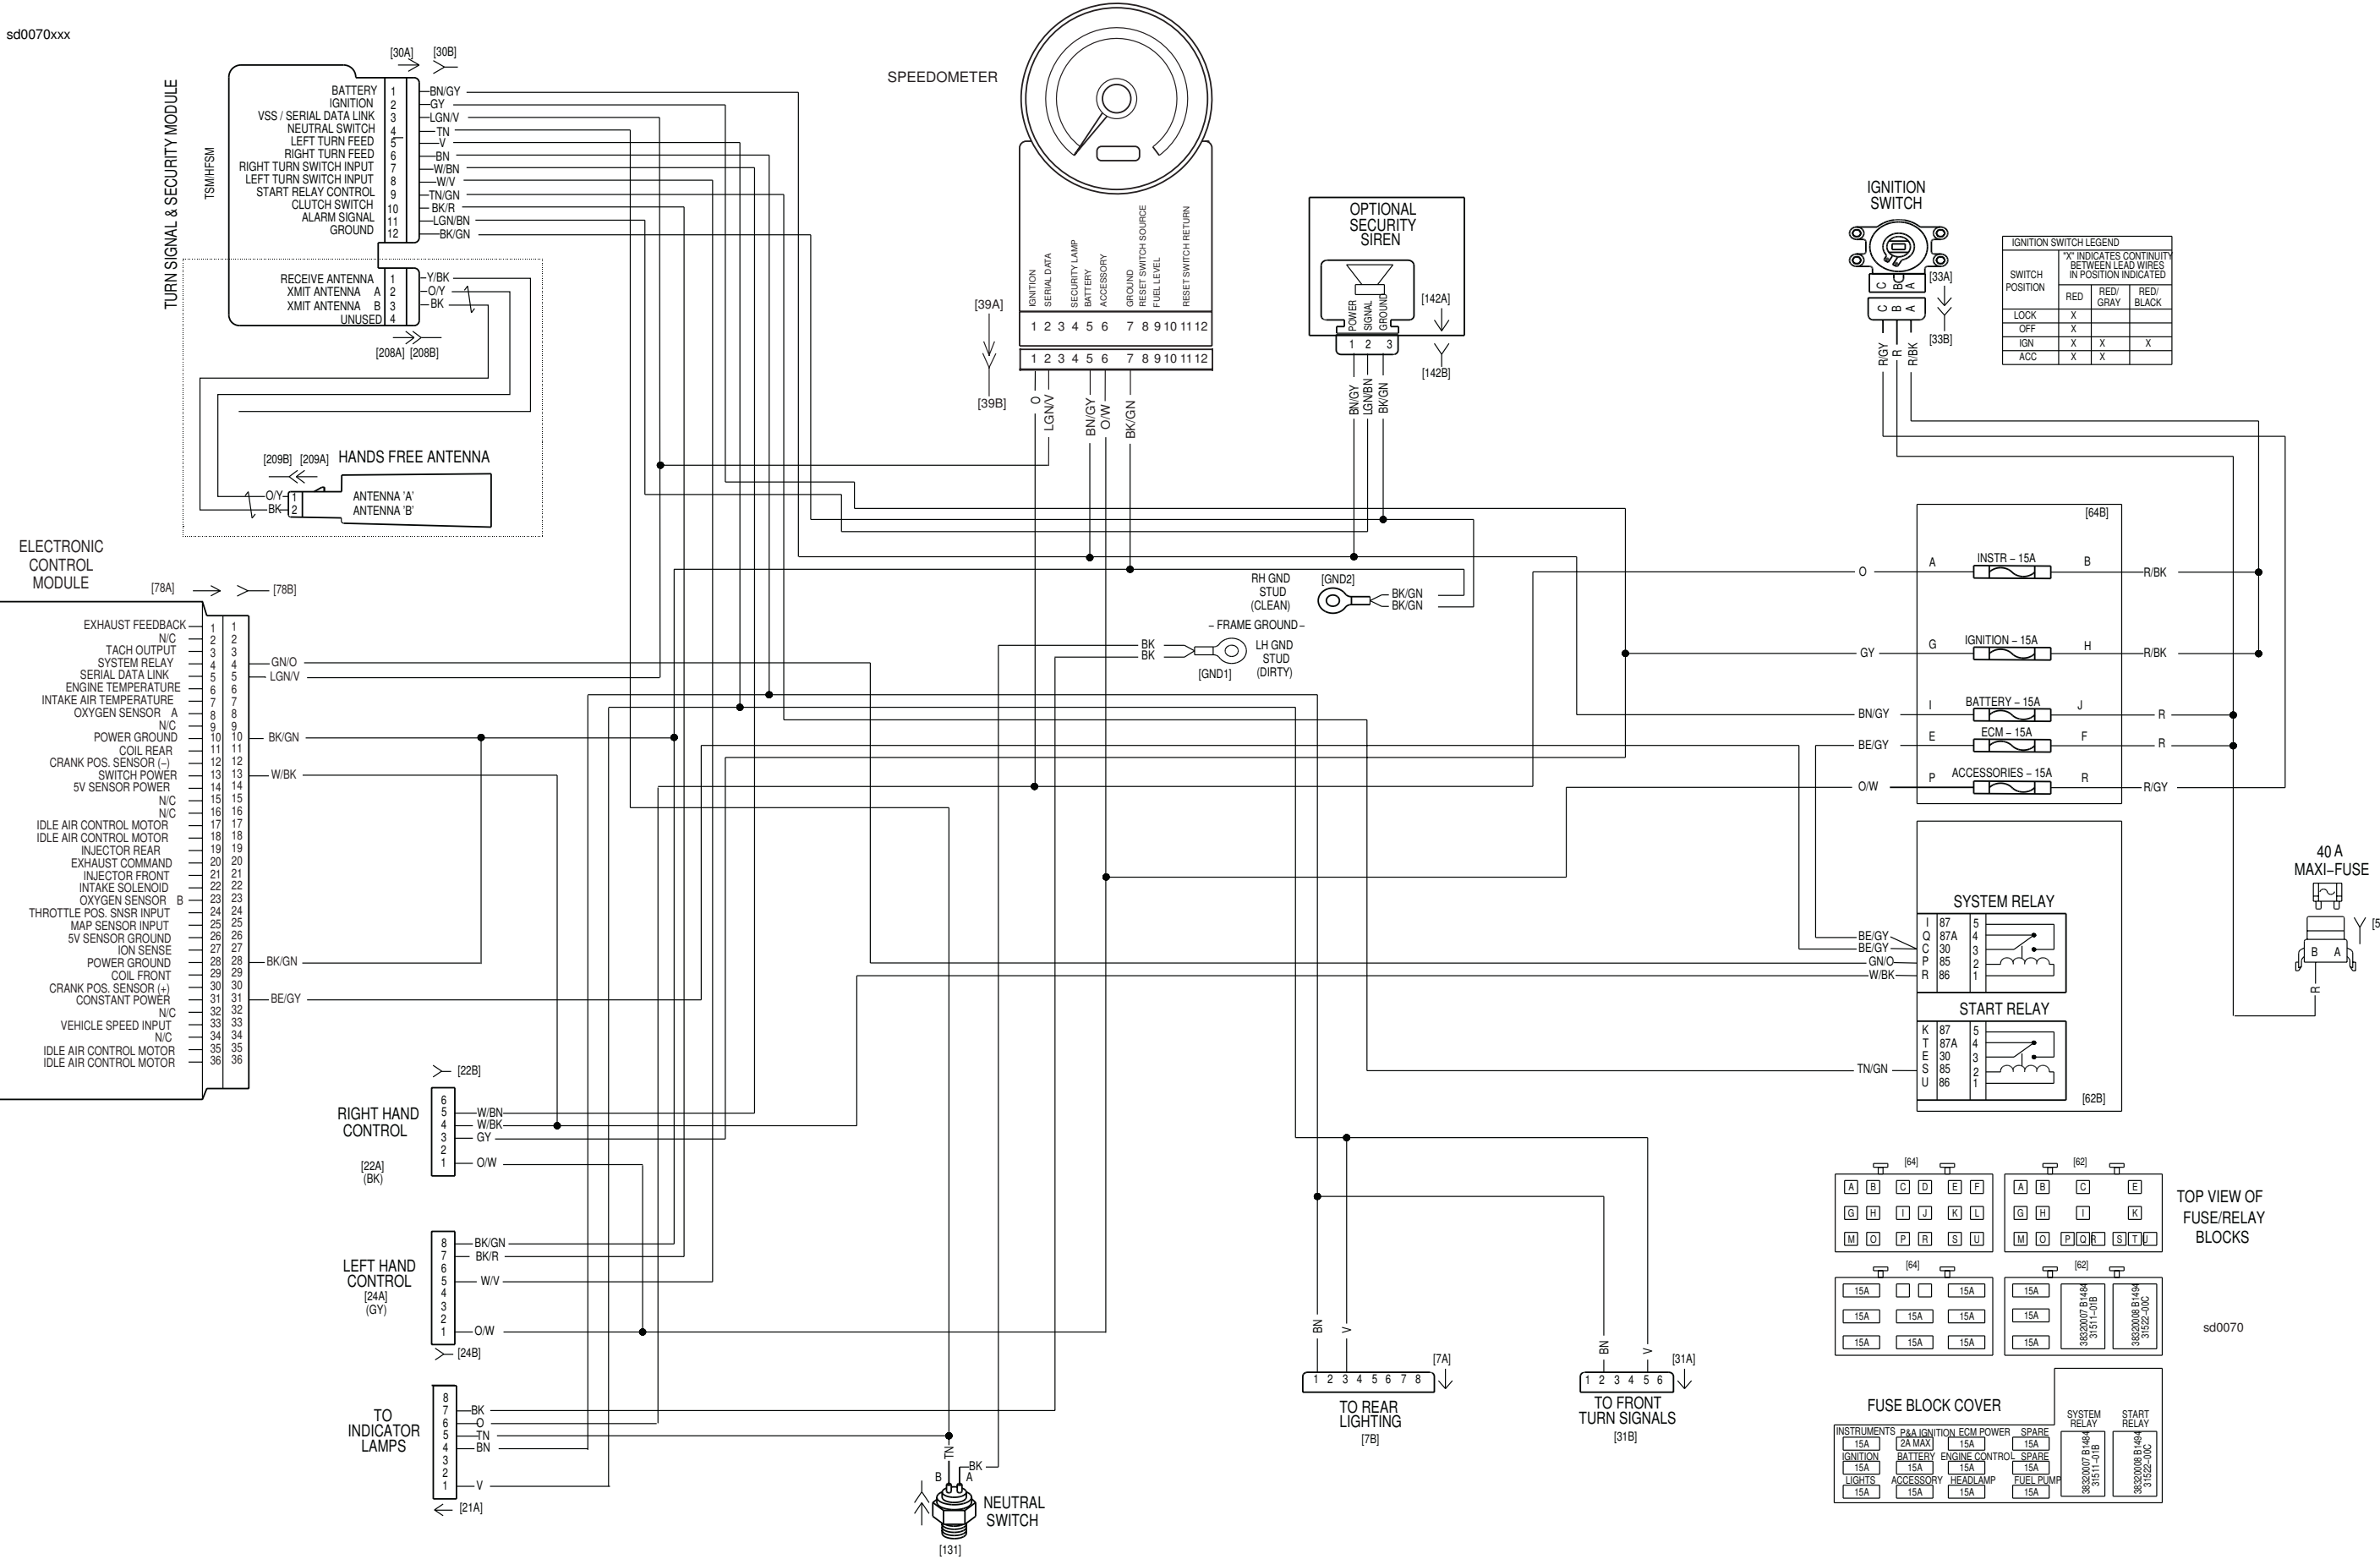


REAR LIGTHING HARNESS
68834-05: FLSTN, FLSTSC

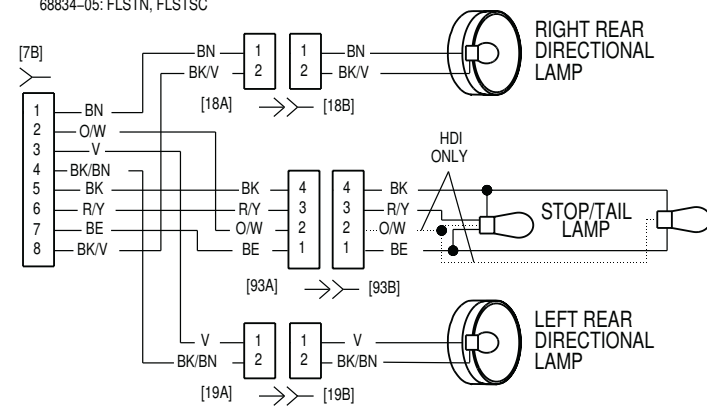


REAR LIGTHING HARNESS
68817-07: FXSTD

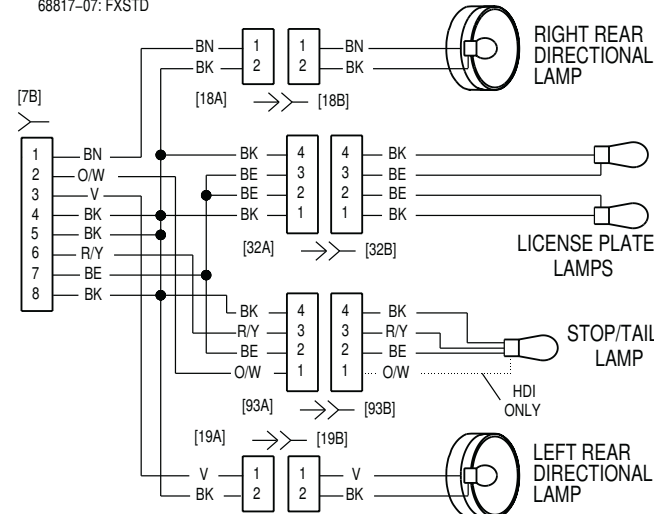


REAR LIGTHING
FXST, FXSTB, FXSTS

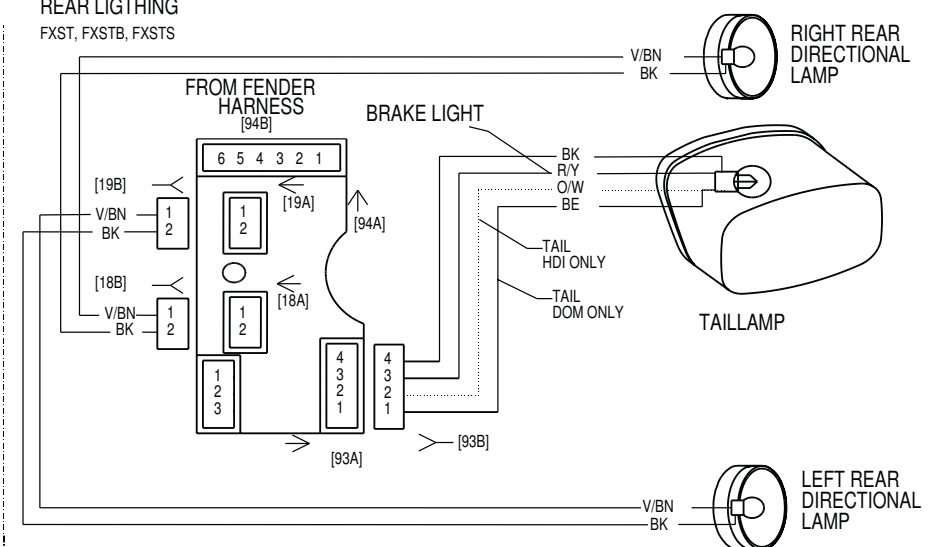




REAR LIGHTING HARNESS
68819-06: FXST, FXSTS, & FXSTB

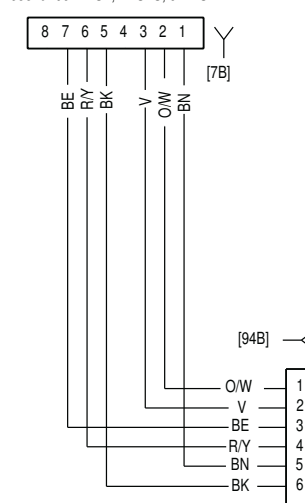


REAR LIGHTING HARNESS
68818-03A: FLSTC
69486-06A: FLSTF

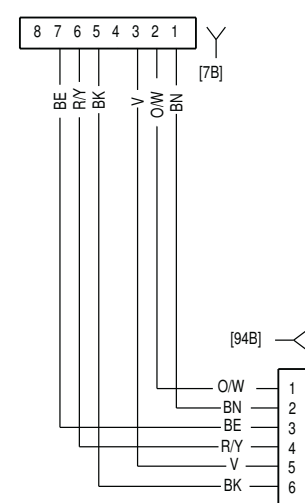

FROM MAIN HARNESS
[21A]

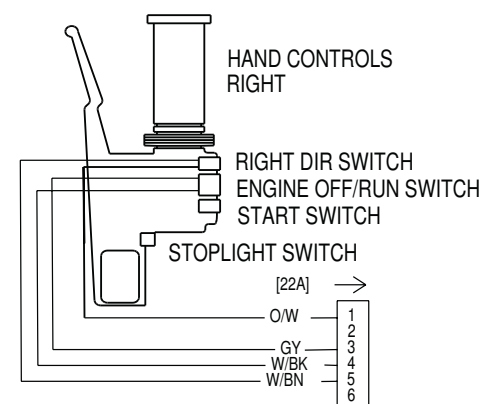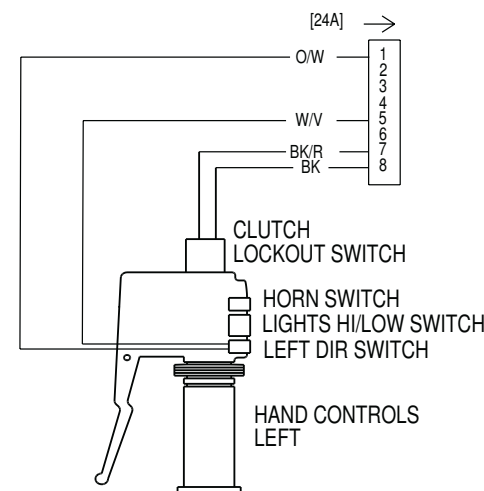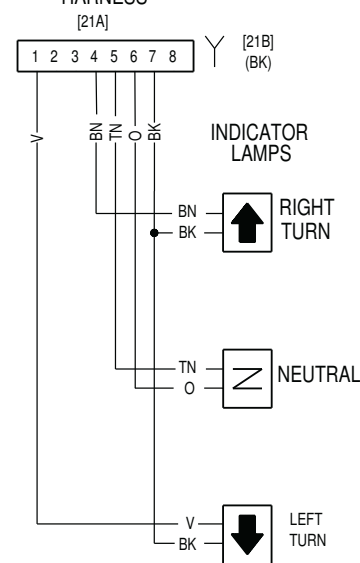

REAR LIGTHING
FLST, FLSTC, FLSTF

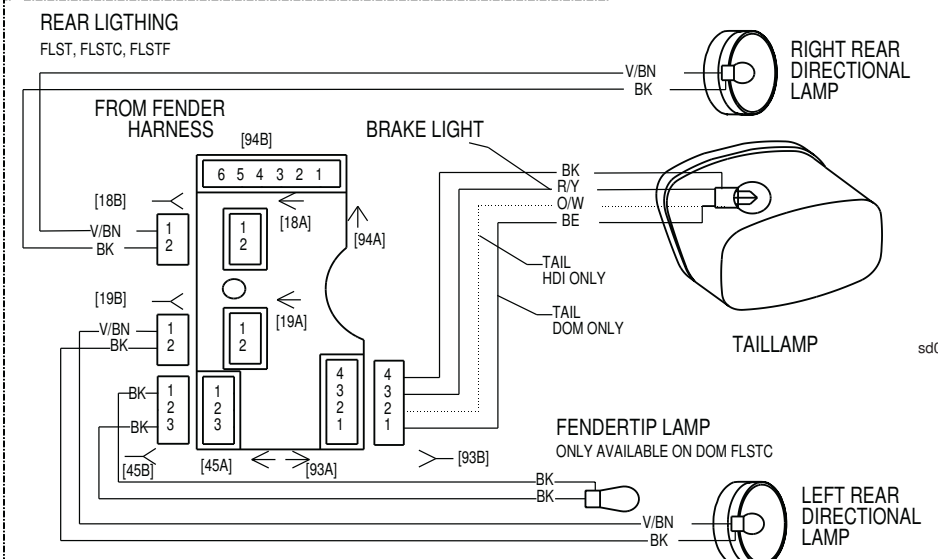

sd0071